


QUICK START GUIDE

EO-BG920

SAMSUNG
Level U



Printed in Korea
GH68-XXXX Rev.1.0
E Type 04/2015

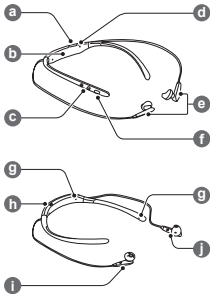

Copyright © 2015 Samsung Electronics

English

Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.

- Please read this manual before using the device to ensure safe and proper use.
- Images may differ in appearance from the actual product. Content is subject to change without prior notice. You can access the full user manual for more information. Visit www.samsung.com to view device information, the user manual, and more.

Device layout

a	Charger port	f	Multifunction/Talk button
b	Neckband (Vibration area)	g	Microphone
c	Volume button	h	Power switch
d	Notification light	i	Left earphone
e	Magnet	j	Right earphone

Charging the battery

Before using the headset for the first time, you must charge the battery.

Open the charging port cover and connect the headset to a charger.



- Chargers are sold separately.
- The charger should remain close to the electric socket and easily accessible while charging.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

Turning the headset on or off

Slide the Power switch to turn on or off the headset.



When you turn on the headset for the first time, it enters Bluetooth pairing mode.

Connecting devices via Bluetooth

You can receive incoming calls or listen to multimedia files when your headset is connected to Bluetooth-enabled devices.

1. Turn on the headset, and then press and hold the Multifunction button for about three seconds to enter Bluetooth pairing mode. The notification light flashes red and blue.
2. On your other device, activate the Bluetooth feature and tap **Samsung Level U** from the list.

Connecting additional devices

The headset can connect to up to two Bluetooth-enabled devices at the same time. For more information, refer to the user manual.

Safety information

Read all safety information before using the device to ensure safe and proper use. To view the full safety information, refer to the Samsung website.

The headset contains magnets in its earbuds. The American Heart Association (US) and the Medicines and Healthcare Products Regulatory Agency (UK) both warn that magnets can affect the operation of implanted pacemakers, cardioverters, defibrillators, insulin pumps or other electro medical devices (collectively, "Medical Device") within the range of 15 cm (6 inches). If you are a user of any of these Medical Devices, DO NOT USE THE HEADSET UNLESS YOU HAVE CONSULTED WITH YOUR PHYSICIAN

Use manufacturer-approved batteries, chargers, accessories, and supplies

Do not touch the device with wet hands

Do not drop or cause an impact to the charger or the device

Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 5°C to 35°C

Do not allow children or animals to chew or suck the device

Do not disassemble, modify, or repair your device

Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region



To prevent possible hearing damage when using a headset, do not listen to sound at high volume for long periods.

Correct disposal



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

This product is RoHS compliant.



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

Removing the battery

- To remove the battery, you **must** visit an authorised service centre with the provided instructions.
- For your safety, you **must not attempt to remove** the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.
- Samsung does not accept liability for any damage or loss (whether in contract or tort, including negligence) which may arise from failure to precisely follow these warnings and instructions, other than death or personal injury caused by Samsung's negligence.

SAMSUNG
ELECTRONICS



Declaration of Conformity

Product details

For the following
Product :
Model(s) :

Declaration & Applicable standards

We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of:

SAFETY
SAR
EMC
RADIO

and the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment by application of EN50581:2012.

Representative in the EU

Samsung Electronics Euro QA Lab.
Blackbushe Business Park
Saxony Way, Yateley, Hampshire
GU46 6GG, UK
2015.XX.XX

Stephen Colclough / EU Representative
(Place and date of issue) (Name and signature of authorised person)

* This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

FCC ID: A3LEOBG920

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

IC: 649E-EOBG920

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.