

DUO TAG TRACKER

DUAL-NETWORK COMPATIBILITY



INSIDE THE BOX


- (1) iHome Duo Tag
(1) CR2032 (3V) Battery
(1) Mini Screwdriver (1) User Manual

OVERVIEW
INTRODUCTION

iHome Duo Tag Tracker, your ultimate companion for keeping track of the things that matter most. Designed for those on the move, this premium tracker features a sleek, durable design with an integrated carabiner, allowing you to clip it to keys, backpacks, or luggage in seconds.

OPERATION INSTRUCTIONS

- 1 • Power On: Press and hold the button for about 2 seconds until you hear a single beep, then release to enter pairing mode.
- 2 • Power Off: Press the power button 5 times in a row with 2 seconds intervals until you hear sound.
- 3 • Power On Confirmation: Double click the Power button , if you hear a beep, it is on. If it does not beep, it is off.
- 4 • Factory Reset: Give the Power Button 4 quick presses to hear the initial tone. Then, press and hold the button until you hear a beep. Continue pressing don't let go until the second musical chime sounds.
- 5 • Pairing Mode Timeout: when the device is on, and is not paired within 10 minutes, the device will exit pairing mode and will time out. please click the device button twice to enter into pairing mode..

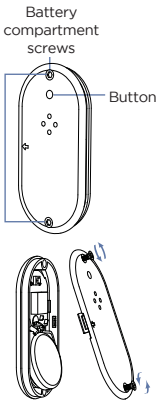

HOW TO PAIR FOR APPLE USERS (FIND MY)

- 1 • Open App: Launch the Find My app on your iPhone.
- 2 • Add Item: Navigate to the "Items" tab and tap the "+" icon, then select "Add Item".
- 3 • Select "Other Items" to begin searching for your iHome Duo Tag. Ensure that tag is in pairing mode
- 4 • Select "iHome Duo Tag" and connect. Once connected, follow the on-screen prompts to link the tag to your Apple ID.
- 5 • Complete the setup to view your Tag's location on the map.

Note • The Tag can only be paired with one system (iOS or Android) at the same time. If the tag has already been paired with a Android device , you need to first remove it from "Find Hub" app and reset the tag to enter pairing mode before connecting it to an Apple device.

HOW TO PAIR FOR ANDROID™ USERS (FIND HUB)
FAST PAIR™ INSTRUCTION

- 1 • Requires Find Hub app (download on Google Play) a nd Android 9+ . Make sure your phone ' s Bluetooth and network connection are turned on.
- 2 • Bring the item close to your Android device and wait for the pop-up. If none appears, restart your phone. Tap " Connect "
- 3 • Agreements:Review the "Use responsibly" notice and select "Agree and Continue".
- 4 • Select "Open app" to view your device dashboard.
- 5 • Your Tag is now linked and ready for locating.

Note • The Tag can only be paired with one system (Android or iOS) at the same time. If the tag has already been paired with a Apple device , you need to first remove it from "Find Hub" app and reset the tag to enter pairing mode before connecting it to an Android device.

TECHNICAL PARAMETERS

Battery: CR2032 (3V)
Max. Operating Frequency: 24Mhz
Standby Static Power Consumption: 18-22uA

MEDICAL DEVICE INTERFERENCE

iHome Duo Tag Tracker contains components and radios that emit electromagnetic fields, as well as magnets. These elements may potentially interfere with pacemakers, defibrillators, or other medical devices. To ensure safety, maintain a safe distance between your medical device and the iHome Smart Tag. We strongly advise consulting your physician and the manufacturer of your medical device for information that is specific to your situation. If you suspect that the iHome Smart Tag is interfering with your pacemaker defibrillator or any other medical device, discontinue its use immediately.

IMPORTANT MATTER

The iHome Duo Tag Tracker contains delicate electronic parts, including a battery to avoid damage, loss of function, or potential harm, please refrain from dropping, hitting, puncturing, crushing, disassembling, exposing it to extreme heat or liquids, or placing it in areas with a high concentration of industrial chemicals.

CHOKING HAZARD WARNING

The iHome Smart Tag, its battery compartment door, the battery itself, and the case may pose a choking hazard or cause injury to small children. Please keep these items out of reach of young children.

NATIONAL BATTERY INGESTION HOTLINE NUMBER: 1-(800) 498-8666

SUPPORT: 877 543 3540

IMPORTANT HANDLING GUIDELINES

Its normal for the iHome Duo Tag Tracker to show discoloration with regular use. To clean it, use a soft, dry, lint-free cloth. Avoid applying pressure with sharp objects on the rubber seal or the battery terminal contacts inside the device.

Do not allow moisture to enter any openings or use aerosol sprays, solvents or abrasive materials to clean the device.

- Install batteries correctly per polarity (+ and -).
- Do not mix old and new batteries, different brands or types.
- Do not heat above 60°C(140°F)
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
- Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above the manufacturer's specified temperature rating, or incinerate.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children
-

FCC ID: 2BQNL-2IHPA1016

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

California Proposition 65 Warning:

 **WARNING:** Cancer and Reproductive Harm
- www.P65Warnings.ca.gov



The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch. To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license. The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements. Google, Android, Google Play, Fast Pair and Find Hub are trademarks of Google LLC.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Lifeworks Technology Group LLC is under license.

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Apple, iPad, iPad Air, iPad Pro, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries. tvOS is a trademark of Apple Inc.

2026 © Lifeworks Technology Group LLC. New York, NY 10018 iHome™ is a registered trademark of SDI Technologies Inc., used under license. iPhone is a trademark of Apple Inc., registered in the U.S. and other countries. All other brands and logos are trademarks of their respective companies. Made in China

 WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of CHILDREN.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

