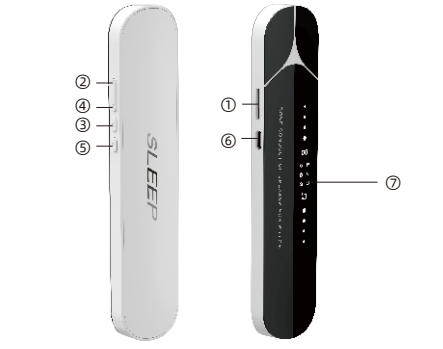
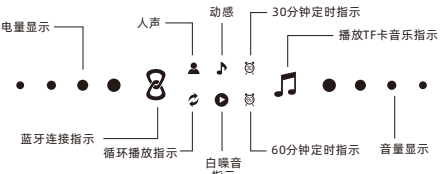
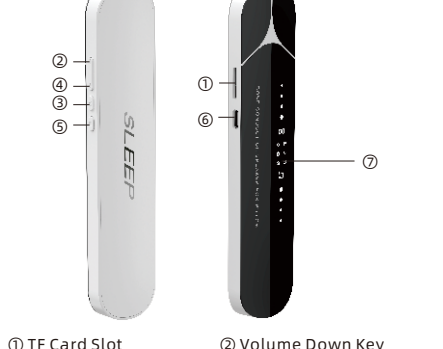
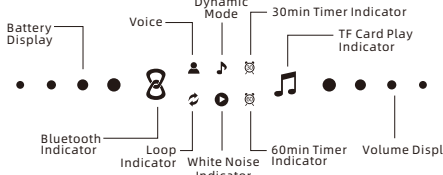


用户手册	示意图及配件  ① TF卡卡槽 ② 音量减号键 ③ 模式切换键 ④ 音量加号键 ⑤ 开关键 ⑥ Type-C充电口 ⑦ LED显示屏 配件清单 1.枕下骨传导音乐盒6代 2.Type-C充电线 3.说明书	 使用说明 ·开关机键 1.长按2秒“开/关机” 2.单击“播放/暂停” ·蓝牙连接 首次使用，CY-017 正常开机后，会进入蓝牙配对状态 8 指示灯闪烁，此时手机蓝牙设置里可搜索到SLEEP BOX 6，连接成功及播放状态指示灯长亮。开机键单击仅支持暂停 / 播放。 ·M模式键 1.单击:切换蓝牙模式/TF卡模式/白噪音模式 2.双击:切换定时模式，30分钟指示灯亮表示定时30分钟，60分钟指示灯亮表示定时60分钟，30和60分钟指示灯同时亮表示90分钟定时 ·-- 减号键 1.单击“音量减” 2.长按2秒"上一曲 3.双击"EQ切换”（音质:人声/动感）	·+ 加号键 1.单击“音量加” 2.长按2秒"下一曲 3.双击"单曲循环”（TF卡模式下） ·充电 插入随机配送的Type-c充电线及任意5V 充电头即可充电,充电过程电量显示上涨，充满电量显示常量。 产品参数 *产品名称: 枕下骨传导音乐盒6代 *产品型号: CY-017 *蓝牙名称: Sleep Box 6 *蓝牙版本:5.4 *产品重量:54g *产品电池:500mAh *产品充电:约1小时 *产品播放:10-16小时 *传输距离:蓝牙10米*输入:5V/200mA *产品协议:A2DP,AVRCP,HSP,HFP *产品尺寸:16cm*3.6cm*1.3cm	故障及排除 ·无法开机 确定设备是否充满电量，同时开关键是否长按3秒以上 ·无法蓝牙连接 设备指示灯是否闪烁，如设备处于常亮阶段，表示设备与其他设备已经连接，需要断开当前连接设备 ·漏音较大 睡眠模式请手机调节音量至50%以内,枕边人无法听见.安全私密70%以上音量为娱乐模式 ·蓝牙天线距离较短 确定前端设备如手机是否蓝牙4.0以上版本，较早版本可能造成蓝牙天线距离较短	感谢您的购买与支持
-----------------	---	--	--	---	----------------------

User Manual	Function and accessory  ① TF Card Slot ② Volume Down Key ③ Mode Switch Key ④ Volume Up Key ⑤ Power Button ⑥ Type-C Charging Port ⑦ LED Display Screen Accessory list 1. Device 1pcs 2. Type-C charging cable 1pcs 3. User maunual 1pcs	 Instructions ·Power On /Off 1.Press and hold for 2 seconds to power on / power off 2. Single tap to play / pause ·Bluetooth Connection First-time use of CY-017: After normal power-on, the unit enters Bluetooth pairing mode with the 8 indicator light flashing. You may search for SLEEP BOX 6 in your phone's Bluetooth settings. Once connected and in playback mode, the indicator light stays solid on. Short press the power key to pause or resume playback. ·M Mode Key 1. Single tap: Switch among Bluetooth Mode, TF Card Mode & White Noise Mode 2. Double tap: Switch to timer mode. When the 30-minute indicator light is on, the timer is set for 30 minutes; when the 60-minute indicator light is on, the timer is set for 60 minutes; when both the 30-minute and 60-minute indicator lights light up simultaneously, the timer is set for 90 minutes. ·-- Minus Key 1. Single tap: Volume down 2.Press and hold for 2 seconds: Previous track 3.Double tap: Switch EQ modes (Vocal / Dynamic sound)	·+ Plus Key 1. Single tap: Volume up 2.Press and hold for 2 seconds: Next track 3.Double tap: Single loop (Only available under TF Card Mode) ·Charging Plug in the supplied Type-C charging cable and any 5V charger to start charging. The power indicator will rise during charging and stay solid when fully charged. Specification * Product Name: Under-pillow Bone Conduction Music Box Gen 6 * Model No.: CY-017 * Bluetooth Name: Sleep Box 6 * Bluetooth Version: 5.4 * Net Weight: 54g * Built-in Battery: 500mAh * Charging Time: Approx. 1 hours * Playback Duration: 10-16 hours * Transmission Range: 10 meters (Bluetooth) * Input : 5V/200mA * Agreement: A2DP, AVRCP, HSP, HFP * Unit size: 16cm × 3.6cm × 1.3cm	Faults and eliminate Can not power on Check if the device is fully charged, and confirm that the power button has been long pressed for more than 3 seconds. Bluetooth unconnect Check if the device indicator light is flashing. If the light stays solid, the device is already connected to another device; you need to disconnect the existing connected device first. Large sound leakage In sleep mode, please adjust the volume of the mobile phone to within50%, which can not be heard by the person next to the pillow. The volume above 70% is entertainment mode Bluetooth range Please confirm whether the phone is connected to Bluetooth version 4.0 or later. Earlier versions may cause short Bluetooth range	FCC Warning: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)This device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Thank you for your purchase and support
------------------------	---	---	---	---	--