


Product Manual
Translator/Translator Pen
M01

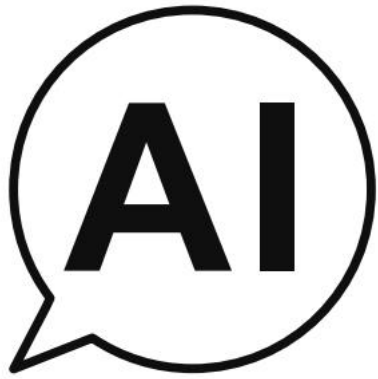

01.Power on/off:

Press and hold the power button for more than two seconds, and the screen will light up with a startup animation to the translation interface for normal use. Press and hold the power button for more than two seconds, the screen will pop up to restart/shut down, select the shutdown icon, and the device will shut down.

02.Restart:

Press and hold the power button for more than two seconds, and the screen will display the restart/shutdown icon. Select the restart icon to restart the device.

03.Return key:

Click the back button to return to the previous interface.

04.Volume adjustment:

Adjust the volume by pressing the buttons on the side of the standalone device to increase the volume; Single machine side - Press the button to reduce the volume to the lowest level, which is the mute mode.

05.Voice keys:

Long press the voice input button on the host (the left voice button corresponds to the language on the left side of the homepage, and the right voice button corresponds to the language on the right side of the homepage) to enter the voice recognition mode. After releasing, the voice will be automatically recognized and analyzed, and translated into the set target language for voice playback (the voice playback mode depends on the settings).

06.TF card:


Can be used for external storage, supports FAT32 format memory cards, and supports up to 128GB memory cards

07.Type-C Interface:

Type-C interface function: charging, data transmission, audio and video signal transmission.

08.online translation:

Connect to WiFi, select online translation, long press the native language translation button or foreign language translation button to achieve mutual translation between languages of 141 countries, as shown in the following figure:

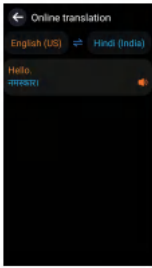

reminder:

1. This function needs to be used in a networked environment
2. Click on the translated text on the display screen to repeat the language playback
3. The native language input key corresponds to the left translation language and foreign language input The key corresponds to the language on the right
4. The clearer the voice input, the more accurate the recognition, and the maximum input One minute duration

09.Offline translation:

The offline translation module can be used in environments without a network, and there are 19 available offline translation languages.


reminder:

This function can be used in a network free environment

10.Photo translation:


Click on the photo translation icon, select the target language to be translated, align the screen window with the content to be translated, click on the photo function, and wait for 2-3 seconds for the content to be translated to appear

Aim at the font that needs to be translated for photo translation. Photo translation can translate 60 languages online, and clicking on the yellow or blue speaker can play the language

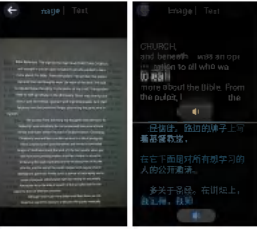

11.Mobile translation:

Open Chrome, PayPal, WeChat and other software on your phone, scan the mobile translation QR code on the translation machine, and you can start mobile translation.

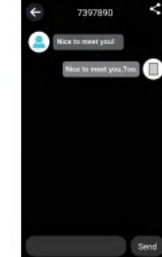

12.Input translation:

Select the language to be translated, enter the translation content in the text input box, and start the translation. Click on the text to play the target language.



reminder:

- 1.This feature can be used in both networked and non networked environments
2. The clearer the photo taken with this feature, the more accurate the translation
3. Click on the trash can icon in the upper right corner to delete the image

13.simultaneous interpretation:

Select the language to be translated, click the button to enter continuous audio mode, and click the button again to translate the recorded content.

14.Language learning:

Select the language to be translated, press and hold the voice capture button to enter the voice, and click "Language Learnings" on the right side of the screen to enter the following mode.

15.ChatGPT:

Click on the icon in the bottom right corner of the screen to create a conversation, press and hold the voice capture button to enter the content, release the button and wait for two seconds. The AI voice assistant will reply to your recorded content.

16.Intelligent recording:

Select the language to be recorded. There are 15 source languages for translation. Click the recording icon or the left and right voice buttons to record the translation content.



reminder:

1. This feature can be used in both networked and non networked environments
2. The clearer the recording, the more accurate the translation
3. Click the edit icon in the upper right corner to delete the recording file

17.Exchange rate conversion:

Select the currency type to be converted, enter the number to be converted, and you can convert the currency.

18.Network connection:

Setting method: Click "Settings" on the main interface, turn on the WiFi function, find the WiFi network that needs to be connected, enter the password to connect, and after successful connection, the WiFi icon will be displayed on the status bar, and you can use it freely.

19.Equipment upgrade:

The device will be updated irregularly. If your device cannot achieve updates and upgrades, the possible reasons are as follows:

- a. The current version is already the latest and there are no new upgrade packages available;
- b. Please check if the network connection of the device is normal, as upgrade notifications will only be received when the network is functioning properly;
- c. Before updating the version, sufficient battery is required. Please do not perform any operation during the system installation process to avoid system installation interruption, upgrade failure, and inability to use normally!

20.Safety precautions:

1. Please do not use this product in high temperature or high humidity environments.
2. This product contains electronic components. Please pay attention to waterproofing and moisture resistance during use and storage. Do not use it in water or humid environments. Use a clean and soft cloth to wipe the surface of the product.
3. When charging, please gently insert or remove the charging cable to prevent excessive force from damaging the interface.

4. Please do not dismantle or repair the product without authorization, otherwise you will not be able to enjoy warranty services.
5. The packaging box and instruction manual of this product contain important information, please keep them for future use.

21.Non warranty terms:

1. The warranty period has expired.
2. Damage caused by force majeure.
3. Performance failures caused by human factors.
4. Unauthorized repair/misuse/collision/negligence/abuse/liquid ingress/accident/modification/incorrect use, or tearing/altering labels.

22.Product Commitment:

We promise that this product complies with the requirements of the national "Management Measures for Pollution Control of Electronic Information Products" (including the "Limit Requirements for Toxic and Hazardous Substances in Electronic Information Products" and the "Requirements for Pollution Control Labeling of Electronic Information Products"). The environmental protection period indicated on the product label ensures that there will be no leakage or explosion during normal use within the corresponding period. The use of this electronic information product by users will not cause serious pollution to the environment or cause serious damage to their personal or property.

Note: This product is shipped without a power adapter. If consumers use a power adapter for power supply, they should purchase a matching power adapter that has obtained CCC certification and meets the standard requirements. Batteries must not be exposed to environments such as sunlight, fire, or similar overheating conditions.

23.Common problems and solutions:

Question	solution
Unable to power on	Please use after charging
Unable to translate via voice	Need to connect to WiFi, if already connected Try switching to WiFi connection WiFi, Suggest trying to connect hands Machine hotspot
Touch unresponsive	Press and hold the power button for 16 seconds Force restart
Scan without response	Need to go to the 'Scan Translation' interface Correctly grip the pen and scan afterwards

Our company is committed to improving the quality and functionality of our products and constantly launching upgraded versions. The content in this manual may differ slightly from the actual product. We apologize for any inconvenience caused if it is not updated in a timely manner.

Federal Communications Commission Notice
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.