

* Some contents in this manual may differ from your phone depending on the software of the phone or your service provider.



**TDMA MOBILE
TELEPHONE
STH-N395**

3rd version
(2002. 11. 27)



Printed in Korea

Code No. : GH68-xxxxxA

English. 11/2002. Rev. 1.0

World Wide Web

<http://www.samsungmobile.com>

Please, be sure to read this manual before using your phone. And keep the manual after reading it and use any time you have a question.

FCC RF EXPOSURE INFORMATION

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.5 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.5 cm. separation distance between the user's body and the back of the phone. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. Contact your local dealer for optional accessory items.

Vehicle Mounted External Antenna (optional, if available.)

A minimum separation distance of 7.9 inches (20cm) must be maintained Between a person and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Contents

Unpacking	7
----------------------------	---

Your Phone

Phone Layout	8
Display	10
Service Light	12

Getting Started

Installing the Battery	13
Charging the Battery	15
Switching the Phone On or Off	17
Locking Your Phone	18

Call Functions

Making a Call	19
Making a Call from the Phonebook	20
Redialing the Last Number	20
Adjusting the Volume	21
Answering a Call	22
Viewing Missed Calls	23
Quickly Switching to Silent Mode	25

Selecting Functions and Options

Using the Soft Keys	26
Selecting Functions and Options	27
Example: Setting the Display Language	28

Phonebook

Storing a Phone Number with a Name	30
Searching for a Number in the Phonebook	31
Entry Options	33
Speed Dialing by Memory Location	35
Phonebook Options	36

Entering Text

Changing the Text Input Mode	40
Using the T9 Mode	41
Using the Upper/Lower-Case Character Mode	42
Using the Number Mode	43

Options During a Call

Muting/Sending Key Tones	44
Searching for a Number in the Phonebook	45
Using the SMS Service	46
Making a Calling card call	46
Making the Voice Call Private	47
Putting a Call on Hold	47
Answering a Second Call	48
Making a Conference Call	49

Using the Menus

Accessing a Menu Function by scrolling	50
Accessing a Menu Function by Using its Shortcut	51
List of Menu Functions	52

Call Records

Missed Calls (<i>Menu 1.1</i>)	57
Incoming Calls (<i>Menu 1.2</i>)	57
Outgoing Calls (<i>Menu 1.3</i>)	58
Call Time (<i>Menu 1.4</i>)	58

Messages

Voice Mail (<i>Menu 2.1</i>)	59
Read Messages (<i>Menu 2.2</i>)	60
Write Messages (<i>Menu 2.3</i>)	62
Preset Message List (<i>Menu 2.4</i>)	63
Setup (<i>Menu 2.5</i>)	64
Message Alert Setting (<i>Menu 2.6</i>)	65
Picture Message (<i>Menu 2.7</i>)	66
Receiving Pictures, Ring Tones, or Caller Line Icons	67

Tones

Ring Tone (<i>Menu 3.1</i>)	71
Ring Volume (<i>Menu 3.2</i>)	71
Alert Type (<i>Menu 3.3</i>)	72
Keypad Sound Type (<i>Menu 3.4</i>)	72
Keypad Tone Length (<i>Menu 3.5</i>)	73
Error Tone (<i>Menu 3.6</i>)	73
Minute Minder (<i>Menu 3.7</i>)	74
Connect Tone (<i>Menu 3.8</i>)	74
Melody Composer (<i>Menu 3.9</i>)	75

Settings

Greeting Message (<i>Menu 4.1</i>)	77
LCD Control (<i>Menu 4.2</i>)	77
Service Light (<i>Menu 4.3</i>)	80
Auto Redial (<i>Menu 4.4</i>)	80
Answer Mode (<i>Menu 4.5</i>)	81
External Keys (<i>Menu 4.6</i>)	81
Short Cut Key (<i>Menu 4.7</i>)	82
Active Flip (<i>Menu 4.8</i>)	83
Service LED Color (<i>Menu 4.9</i>)	83
Language (<i>Menu 4.10</i>)	84
Calling Card (<i>Menu 4.11</i>)	84
Reset Setting (<i>Menu 4.12</i>)	87

Organizer

Calendar (<i>Menu 5.1</i>)	88
To do List (<i>Menu 5.2</i>)	90
Time & Date (<i>Menu 5.3</i>)	92
Alarm (<i>Menu 5.4</i>)	94
Calculator (<i>Menu 5.5</i>)	95

Security

Change Lock code (<i>Menu 6.1</i>)	96
Change Security code (<i>Menu 6.2</i>)	96
Call Restriction (<i>Menu 6.3</i>)	97
SOS Call List (<i>Menu 6.4</i>)	98

Network Services	
Call Diverting (<i>Menu 7.1</i>)	99
Call Waiting (<i>Menu 7.2</i>)	100
Network Selection (<i>Menu 7.3</i>)	101
Voice Privacy (<i>Menu 7.4</i>)	102
NAM Selection (<i>Menu 7.5</i>)	102
Set Service Code (<i>Menu 7.6</i>)	103
Public System Selection (<i>Menu 7.7</i>)	104
Games	105
Voice Functions	
Voice Dial (<i>Menu 10.1</i>)	107
Voice Command (<i>Menu 10.2</i>)	110
Voice Memo (<i>Menu 10.3</i>)	110
Solving Problems	112
Health and Safety Information	114
Glossary	129
Index	132
Quick Reference Card	137

Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal. For more detailed safety information, see “Health and Safety Information” on page 114.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching Off in Aircraft

Wireless phones can cause interference. Using them in aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch off your phone near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Unpacking

Radio frequency exposure information

In August 1996, the Federal Communications Commission (FCC) of the U.S. adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. The design of this phone complies with the FCC guidelines and these international standards.

Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Accessories and Batteries

Use only Samsung-approved accessories and batteries.

Qualified service


Only qualified service personnel may install or repair your phone.

Your package contains the following items.

Handset



Travel Charger



Battery



Hand Strap



User's Manual



In addition, you can obtain the following accessories for your phone from your local Samsung dealer:

- Desktop charger
- Hands-free kit
- Standard/Extended battery
- Cigarette lighter adapter
- Ear-microphone
- Leather case

Your Phone

Phone Layout

The following illustrations show the main elements of your phone.



Key

Description



(Soft keys)

Perform the functions indicated by the text above them (on the bottom line of the display).



In the menu mode, scroll through the menu options and the phonebook memory. When pressed in the standby mode, enter your favorite menu options directly. For more information on shortcuts, see page 86.



Deletes characters from the display. In the menu mode, returns to the previous menu level.

When held down for more than two seconds in the standby mode, quickly enters or exits the silent mode.



Makes or answers a call. In the standby mode, recalls the last number dialed.



Ends a call. Also switches the phone on and off when pressed and held. In the menu mode, cancels your input and returns to the standby mode.



When held down in the standby mode, allows you to access your voice mail box.



Enter numbers, letters and some special characters.

Key Description (continued...)



Enter special dial characters. Also use these keys for various purposes in different functions.




(on the side of the phone)
During a call, adjust the earpiece volume.
In the standby mode with the folder open, adjust the key volume.
In the menu mode, scroll through the menu options and the phonebook memory.

Display

Display Layout

The display comprises three areas.

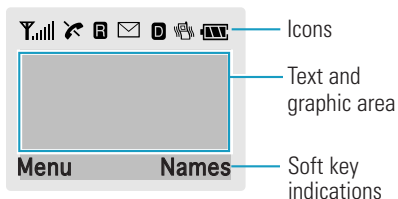

Area	Description
First line	Displays various icons (see page 11).
Middle lines	Display messages, instructions and any information that you enter; for example, the number to be dialed.
Last line	Shows the functions currently assigned to the two soft keys.

Icons

Icon Description



Shows the received signal strength. The greater the number of bars, the better the signal.



Appears when a call is in progress.



Appears when you are outside the service area.



Appears when a new text message has been received.



Appears when the silent mode is active and when the **Alert Type** menu option (**Menu 3.3**) is set to **Vibration** or **Vibra+Melody**.



Appears when you set an alarm.



Shows the level of your battery. The more bars you see, the more power you have left.



Appears when you are out of your home area and have registered onto a different network; for example, when travelling in other countries.



Appears when the phone is in the digital mode.



Appears when a new voice mail message has been received.



Appears when you activate the mute mode.

Backlight


The backlight illuminates the display. When you press any key, the backlight illuminates. It turns off if no key is pressed within a given period of time, depending on the **Backlight** option set in the **Settings** menu.

To specify the length of time for which the backlight is active, set the **Backlight** menu option (**Menu 4.2.4**); see page 79 for further details.

Service Light

The service light is at the top left-hand corner of the phone. It flashes to indicate phone status: When the phone is ready for use, it flashes in green. When a call or message comes in, and you are recording a voice memo, it flashes in red.

To activate or deactivate use of the service light, set the **Service Light** menu (**Menu 4.3**); see page 80 for further details.

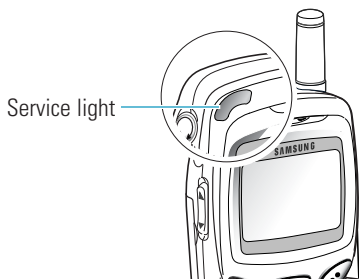


Getting Started


Installing the Battery

To Install the Battery

1. Insert the contact end on the bottom of the battery into the slots at the bottom of the phone.

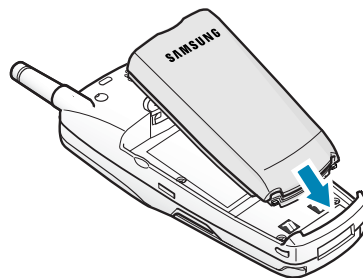


2. Press the battery down until it clicks into place.

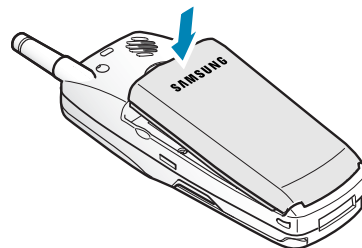

To Remove the Battery

1. If necessary, switch off the phone by holding down the  key until the power off graphic begins to play.
2. Remove the battery. To do so:
 - ① Push the catch above the battery towards the top of the phone and
 - ② lift the battery away.

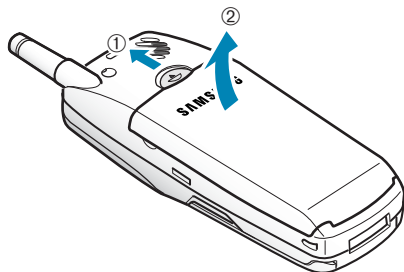


Charging the Battery

Your phone is powered by a rechargeable Li-Ion battery. A travel adapter comes with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging.


Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 200 minutes.

1. With the battery in position on the phone, plug the connector of the travel adapter into the slot at the bottom of the phone.

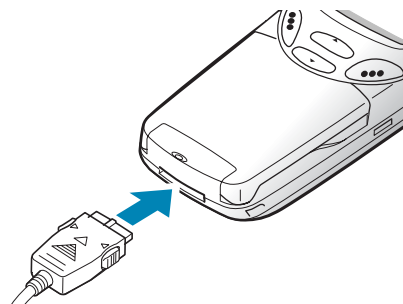

2. Plug the adapter into a standard AC wall outlet.


- When charging is finished and the lamp on the charge turns green, unplug the adapter from the AC wall outlet and then from the phone.

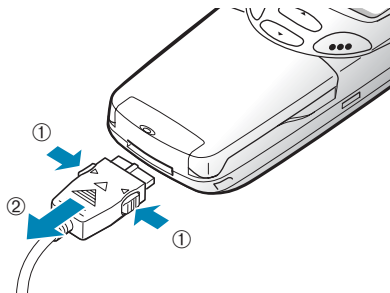

Note: Do not remove the battery from the phone without unplugging the adapter while it is charging. If you do this, the phone may be damaged.

Low Battery Indicator


When the battery is weak and only a few minutes of talk time remain, you will hear a warning tone and the following message will be repeated at regular intervals on the display, along with the empty battery icon:

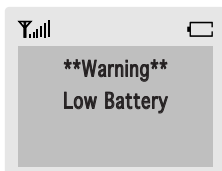

When the battery becomes too weak for the phone to operate, it switches off automatically.

Switching the Phone On or Off

- Open the flip cover.
- Hold down the  key for more than one second to switch the phone on.
- The phone searches for your network and when it finds the network, the idle screen, illustrated below, displays.

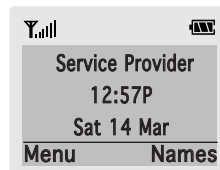

Note: The display language is preset to **English** at the factory. To change the language, use the **Language** menu option (**Menu 4.10**); for further details, refer to page 84.


- When you wish to switch the phone off, hold down the  key for more than two seconds.

Locking Your Phone

You can lock your phone to protect the phone against unauthorized use. When the phone is locked, you cannot use the phone until you enter the lock code.

To lock your phone:

Press and hold the **#** key for more than two seconds in the standby mode. "Phone Locked" appears on the idle screen.

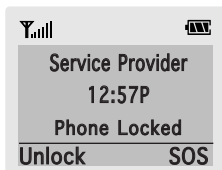

To unlock the phone:

Press the **Unlock** soft key and enter the lock code, and then press the **OK** soft key. Your phone's lock code is preset to "0000" at the factory. For further details on the lock code, see page 95.

Even when the phone is locked, you can place an SOS call to one of the emergency numbers stored in the SOS Call List (**Menu 6.4**). See page 98 for further details.

To place an SOS call, press the **SOS** soft key, select an emergency number by pressing the **▲** or **▼** key and press the **Yes** soft key.

Call Functions

Making a Call

When the idle screen is displayed, enter the area code and phone number and press the **☎** key.

Note: If you have set the **Auto Redial** menu (**Menu 4.4**) to **On** and no one answers or the line is busy, the phone automatically retries to make the call up to ten times. If the network answers the call (by voice mail greeting, for example), the phone does not attempt to redial. See page 80.

Correcting the Number

To clear	Press
the last digit displayed	the C key.
the whole display	and hold the C key for more than one second.

Ending a Call

When you want to end a call, briefly press the **☎**^① key or close the flip cover.

Making a Call from the Phonebook

You can store the phone numbers that you use regularly in the phone's memory, which are collectively called the Phonebook. Simply select the required name to recall the associated number to dial. For further details about the Phonebook feature, refer to page 30.

Redialing the Last Number

The phone stores the last numbers you dialed. To redial any of these numbers:

1. If you have typed any characters on the display, press the  key to return to the standby mode.
2. Press the  key to display the last dialed number.
3. Press the  or  key to scroll through the numbers until the required number displays.

4. To	Press
dial the number displayed	the  key.
edit the number displayed	• the Edit soft key. Change the number as required, referring to "Correcting the Number" for details (see page 19). • the Save soft key to save the number or the  key to dial the number.

Adjusting the Volume

During a call, if you want to adjust the voice volume, use the volume keys on the left side of the phone.


Press the upper position to increase and the lower portion to decrease the volume.



In the standby mode with the flip cover open, you can adjust the key tone volume using the keys.

Answering a Call

When someone calls you, the phone rings and displays the phone icon in the middle of the screen.

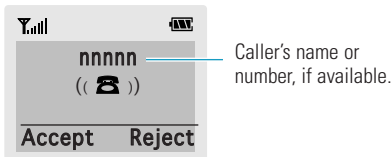

If you are subscribed to the Caller Line Identification service and the caller can be identified, the caller's phone number or name, if stored in your Phonebook displays. If the caller cannot be identified, only the phone icon displays.

1. Open the flip cover. If it is already open, press the  key.

If the **Answer Mode** menu (**Menu 4.5**) is set to **Open Answer**, you can answer immediately the call by opening the flip cover.

If the menu is set to **Anykey Answer**, you can press any key except the  key to answer the call.

If the menu is set to **Send Key Answer**, you must press the  key or the **Accept** soft key to answer the call. For details on the **Answer Mode** menu, see page 81.

2. End the call by closing the flip cover or pressing the  key.

Note: You can answer a call while using the Phonebook or menu features. The current operation will be interrupted.

Viewing Missed Calls

If you are unable to answer a call for any reason, you can find out who is calling you, if the Caller Line Identification service is available, so that you can call the person back, if necessary. The number of missed calls is displayed on the idle screen immediately after the call is missed.

To view the missed call immediately:

1. If the flip cover is closed, open the cover.
2. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.

To	Press the
scroll through the missed calls	▲ or ▼ key
call the number displayed	 key.
edit or delete a missed call number	Options soft key (For further details, see the next page).

Editing a Missed Call Number

Note: If the caller's number associated with the missed call is not available, the **Edit** option is not displayed.

- Press the **Options** soft key.
- If necessary, press the ▲ or ▼ key to highlight the **Edit** option.
- Press the **Select** soft key.
- Change the number as required.

To	Press the
call the number	 key
store the number	Save soft key and enter the name and location required (For further details, refer to page 30).

Deleting a Missed Call

- Press the **Options** soft key.
- If necessary, press the ▲ or ▼ key to highlight the **Delete** option.
- Press the **Select** soft key.

You can press the [®] key at any time to exit the Missed Call feature.

Note: You can access the missed calls at any time by selecting the **Missed Calls** menu (**Menu 1.1**). For further details, see page 57.

Quickly Switching to Silent Mode

You can quickly switch your phone to silent mode with a touch of a key. Press and hold the **C** key until the  icon and “Silent Mode” appears on the display. Your phone goes to silent mode immediately.

In silent mode, your phone switches the sound settings as follows:

Alert Type (Menu 3.3)	Vibration
SMS Tone (Menu 2.6)	vibration
Error Tone (Menu 3.6)	off
keypad tone	off

To exit the silent mode, press and hold the **C** key again until “Exit Silent Mode” appears.

This feature is convenient when you are in a hurry to mute the phone sound, as when in a theater, for example.


Selecting Functions and Options

Using the Soft keys

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display indicates its current role.

Example:

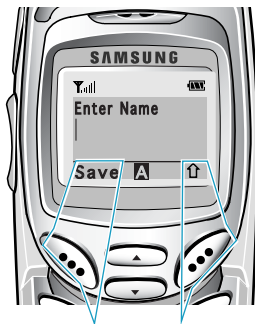

Press the left soft key to save the name entered.

Press the right soft key to select the text input mode.

Selecting Functions and Options

To view the various functions/options available and select the one required:

1. Press the appropriate soft key.


To	Press the
select the: - Function displayed <u>or</u> - Option highlighted	Select soft key.
view the next function or highlight the next option in a list	▼ key or lower portion of the volume key
move back to the function or option in a list	▲ key or upper portion of the volume key.
move back up one level in the structure	↶ soft key or C key.
exit the structure without changing the settings	 [Ⓢ] key.

In some functions, you may be asked for a lock code or security code. Enter the required code and press the **OK** soft key.


Note: When you access a list of options, your phone highlights the current option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Example: Setting the Display Language

1. When the idle screen displays, press the **Menu** soft key to enter menu mode.

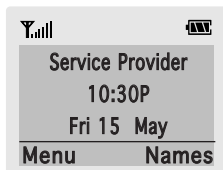


2. Scroll through the menus until you reach the **Settings** menu, by pressing the ▼ key.

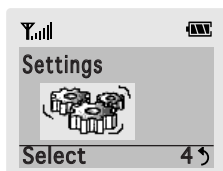


3. To enter the **Settings** menu, press the **Select** soft key.




4. Scroll through the sub-menus until you reach the **Language** sub-menu, by pressing the ▼ key.

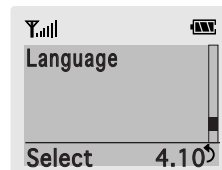

5. Press the **Select** soft key to choose **Text Language** option.

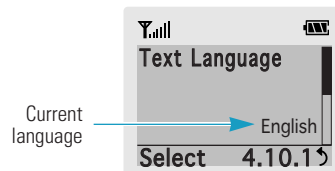

6. To view the languages available, press the **Select** soft key. The current setting highlights.

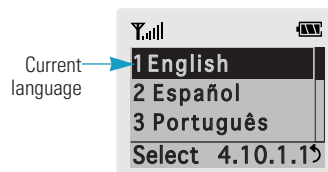

7. Find the appropriate language, by pressing the ▲ or ▼ key.
8. Press the **Select** soft key to confirm your selection.
9. Press the **C** or 5 soft key twice to exit the menu structure.

Phonebook

The Phonebook allows you to store frequently used phone numbers and the associated names in your phone to make it easy for you to make a call without having to remember or enter the phone number.

Storing a Phone Number with a Name

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in your Phonebook.

1. Enter a phone number you want to store.

Note: If you make a mistake while entering a number, correct it using the **C** key. For further details, refer to page 19.

2. To save the number, press the **Save** soft key.
3. Select a label by pressing the **▲** or **▼** key, and press the **Select** soft key.

The available labels are: **Home**, **Office**, **Mobile**, **Pager**, **Fax** and **E-mail**.

4. Enter the desired name. For information on how to enter a name, see page 39.
5. When you are satisfied, press the **OK** soft key.
The phone now prompts you to select a location in the phone's memory for you to save the entry.

6. If necessary, enter your preferred location by pressing the number keys.
7. Press the **OK** soft key. The entry is saved and the display shows the name and number you just have saved.
8. To make a call to the displayed number, press the  key.

To send an SMS message to the displayed number, press the  **SMS** soft key. See page 62 for further details about sending a message.

To access the editing options, press the **Options** soft key. See page 33.

9. Press the  key to return to the standby mode.

Searching for a Number in the Phonebook

1. When the idle screen displays, press the **Names** soft key. You are asked to enter a name.
2. Enter the first letters of the name that you want to find and press the **Search** soft key.

Note: You can also scroll through all of your Phonebook entries by pressing the **Search** soft key directly.

The Phonebook entries are listed, starting with the first entry matching your input.

3. To	Press the
view the highlighted entry	View soft key.
select a different entry	▲ or ▼ key until the required entry highlights.
look for a name starting with a different letter	key labeled with the required letter.

4. Press the ▲ or ▼ key until the desired number is displayed.

5. Once you have found the required number, press the  key to dial the number.

To send an SMS message to the selected number, press the  **SMS** soft key. For further details about sending a message, see page 62.

To edit the selected entry, press the **Options** soft key. For further details about the options, see page 33.

Entry Options

When viewing a number in your Phonebook, **Options** appears above the right soft key to allow you to access the options for editing the entry.

Accessing the Options

To access the various options:

1. While viewing a Phonebook entry, press the **Options** soft key. The first available option is highlighted.

2. To	Press the
select the highlighted option	Select soft key.
highlight a different option	▲ or ▼ key until the required option highlights.

Add Number

This option allows you to store up to seven numbers per entry by assigning them to different categories. Note that you cannot duplicate same categories for one entry. For example, you can only have one number labeled "Mobile" for the selected entry.

New Name

This option allows you to add a new phonebook entry. See page 30 for further details about storing an entry.

Change Name

This option allows you to change the name for the entry. Clear the old name pressing the **C** key and enter a new name. For information on entering a name, see page 39.

Change Number

This option allows you to change the number. Clear the old number by pressing the **C** key and enter a new number.

Change Type

This option allows you to change the label type of a stored number. Note that you cannot duplicate same categories for one entry. For example, you can only have one number labeled “Mobile” for the selected entry.

Erase Number

This option allows you to erase a stored number. If you saved two numbers under a name, only the currently selected number is erased. You are asked to confirm that you wish to erase the number by pressing the **Yes** soft key.

Erase Name

This option allows you to erase a name stored in the Phonebook so that all of the numbers under the name are erased. You are asked to confirm that you wish to erase the name by pressing the **Yes** soft key.

Move

This option allows you to move a Phonebook entry to another location. When prompted, enter the location number where you want to move, and press the **OK** soft key.

Caller Group

This option allows you to set the number as a member of the caller group. Select the desired caller group from the list. For more details about the Caller Group feature, see page 37.

Set Key Number

This option allows you to set the selected number as a speed dial number for the entry if it has more than one number. Press the **Set** soft key.

Speed Dialing by Memory Location

Once you have stored phone numbers in the phonebook memory, you can dial them easily whenever you want.

To speed dial the desired number:

For the 1-digit memory location number (1 through 9), press and hold down the appropriate digit.

For the 2 or more-digit memory location number (10 through 500), press first digit(s) briefly and hold down the last digit.

Note: If you enter the location number and press the **#** key, your phone displays the details on the entry, such as name, number, location number and label. If you have stored more than one number for a name, scroll through the entry by pressing the **#** key repeatedly.

Phonebook Options

When you press the **Names** soft key for searching, you can see **Options** above the right soft key. This key allows you to use the various options for your Phonebook.

Accessing the Options

To access the various Phonebook options:

1. In idle mode, press the **Names** soft key.
2. Press the **Options** soft key. The first available option highlights.

To	Press the
select the highlighted option	Select soft key.
highlight a different option	▲ or ▼ key until the required option highlights.

New Entry

This option allows you to create a new entry in the Phonebook. For details about storing a phone number, see page 30.

Caller Group

You can set the phone to ring in a specific way and display a preselected graphic icon when a particular person calls you. To do so, you must:

- Define your caller groups
- Assign the numbers in the Phonebook to the appropriate group

Defining a caller group

Select the group to be defined and set the appropriate options. The following options are available.

Call ring tone: allows you to select the ring tone to be used when you receive a voice phone call from a person in the group.

SMS tone: allows you to select the ring tone to be used when you receive a text message from a person in the group.

Graphic: allows you to select the graphic icon to be displayed when you receive a call from a person in the group.

Group Name: allows you to assign a name to the group; for further details on how to enter characters, refer to page 39.

Assigning numbers to a group

1. View the required number in Phonebook.
2. Press the **Options** soft key.
3. Select the **Caller Group** option.

4. Select the required group.

To remove a number from a group, select the **No Group** option.

LED Color: allows you to select the color of the service light when you receive a call from a person in the group.

Own Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

Memory Status

You can check the used memory and free memory you have for Phonebook . The display shows how many entries are currently stored and can be saved in the future.

Erase All

This option allows you to erase all of the Phonebook entries.

When a confirmation appears, press the **Yes** soft key to erase all of the Phonebook entries. To cancel erasing the entries, press the **Cancel** soft key.

When prompted, enter the lock code. All of the entries in the Phonebook are erased.

Entering Text

When using your phone, you will often need to enter text. For example, when storing a name in the phonebook, creating your personal greeting or scheduling events in your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter - when you press the **5** key once, J, K or L displays. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional upper/lower-case character modes.

- **Upper/lower-case character modes**


These modes allow you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter displays.

- **Number mode**

This mode allows you to enter numbers.

Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

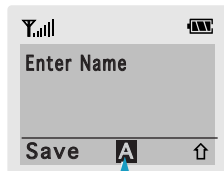

Text input mode indicator

To select	Press the  soft key until
T9 mode	 displays. See page 41.
Upper-case characters mode	 displays. See page 42.
Lower-case characters mode	 displays. See page 42.
Number mode	 displays. See page 43.

Using the T9 Mode

The T9 predictive text input mode allows you to enter any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys **2** to **9**. Press each key only once for one letter.

Example: to enter *HELLO* in the T9 mode, press **4**, **3**, **5**, **5** and **6**.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. If the word is correct, start entering the next word.

Otherwise, press the **0**,  or  key repeatedly to display alternative word choices for the keys that you have pressed.

Example: both *OF* and *ME* have the sequence **6**, **3**. The phone displays the most commonly used choice first.

4. Complete each word with a space by pressing the **#** key.
- To type words not found in the T9 mode, change the text input mode to the upper/lower-case character input mode.

- To enter full stops, hyphens or apostrophes, press the **1** key. The T9 mode applies grammar rules to ensure that the correct punctuation is used.

Example: **1** is used twice to display two punctuation marks:



- To shift the case in the T9 mode, use the ***** key.
- You can move the cursor by using the **#** key. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using the Upper/Lower-Case Character Mode

Use the **1** to **9** keys to enter your text.

1. Press the keys labeled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on

2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, press the **1** key to enter a space or just wait for a few seconds for the cursor to move right automatically, and then select the next letter.

Refer to the table below for more information about the characters available:

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space 1	Space 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	0	0
*	* / + - = < > () % & _ Φ Θ Ψ Π Σ Ξ	. @ # , ; ! ? ' " ' § £ \$ ¥ = α Ω

- You can move the cursor by using the **#** key. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using the Number Mode

The Number mode enables you to enter numbers into a text messages. Press the keys corresponding to the desired digits, and manually switch back to the text input mode of choice.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Muting/Sending Key Tones

You can turn the key tones which were generated each time you press a key off or on.

To turn the key tone off:

1. During a call, press the **Options** soft key.
2. Press the ▲ or ▼ key to select the **Mute Keys** option. Now, the option is replaced with **Send Keys**.
3. Press the **OK** soft key.
Your phone does not transmit the key tones. It allows you to press keys without hearing annoying key tones during a call.

To turn the key tone on:

1. During a call, press the **Options** soft key.
2. Press the ▲ or ▼ key to select the **Send Keys** option. Now, the option is replaced with **Mute Keys**.
3. Press the **OK** soft key.

Note: To communicate with answering machines or computerized telephony systems, the **Send Keys** option must be selected.

Searching for a Number in the Phonebook

You can search for a number in the Phonebook during a call.

1. During a call, press the **Options** soft key.
2. Press the ▲ or ▼ key to select the **Phonebook** option.
3. Press the **OK** soft key.
The Phonebook entries are listed.
4. Enter the name that you want to find.

If you enter the first letters of the name, the Phonebook entries are listed, starting with the first entry matching your input. The entry also highlights.

5. To view the highlighted entry, press the **View** soft key.

For a more detailed description of the Phonebook feature, refer to page 30.

Using the SMS Service

You can create and send a SMS message during a call.

1. During a call, press the **Options** soft key.
2. Press the ▲ or ▼ key to select the **SMS Service** option.
3. Press the **OK** soft key.
4. Write text for the message, and press the **OK** soft key.
5. Enter the desired phone number, and press the **OK** soft key to send the message.

For further details about the SMS service, refer to page 59.

Making a Calling Card Call

When you make a call using the prepaid calling card, if you save the calling card information in the **Calling Card** menu (**Menu 4.11**), you can send automatically the code number required for the service without entering them manually each time you are prompted.

For further details about making a calling card call, refer to page 84.

Making the Voice Call Private

You can make the current call private so that nobody eavesdrops your call.

1. During a call, press the **Options** soft key.
2. Press the ▲ or ▼ key to select the **Voice Privacy** option.
3. Press the **Select** soft key.
4. Press the ▲ or ▼ key to select **Activate** or **Deactivate**.

Select **Activate** to secure your call or **Deactivate** not to do.

5. Press the **Select** soft key.

Putting a Call on Hold

You can make another call while you have a call in progress if your network supports this service. If you have an active call and a call on hold, you may alternate between the two calls, changing the one on hold to active and placing the other on hold.

Note: The procedure to put a call on hold may vary depending on your network. For further details, contact your service provider.

To make a call while you have a call in progress:

1. During a call, key in the phone number that you wish to dial or look it up in the Phonebook.
2. Press the  key to dial the second call. The first call is automatically put on hold.
3. To switch between the two calls, simply press the  key.
4. To end the current call, press the  key.

Answering a Second Call

You can answer an incoming call while you have a call in progress, if your network supports this service and you have set the **Call Waiting** menu (**Menu 7.2**) to **Activate** (see page 100). Your phone notifies you of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. When you hear a call waiting tone, press the  key to answer the incoming call.
The first call is automatically put on hold.
2. To switch between the two calls, press the  key.
3. To end the current call, press the  key.

Making a Conference Call

You can conduct conference calls with two separate parties at the same time. A conference call is a network service. For more information, contact your service provider.

Note: The procedure may vary depending on your network. Contact the service provider for details.

1. Call the first participant in the normal way.
2. Call the second participant in the normal way.
The first call is automatically put on hold.
3. When the second person answer, press the  key to merge the calls.
4. End the conference call by closing the flip cover or pressing the  key.

During a conference call, if one of the callers hangs up, you and the remaining caller stay connected. If you initiated the call and you hang up first, all of the three parties are disconnected.

Using the Menus

The phone offers a range of functions that allows you to tailor the phone to your needs. These functions are arranged in menus and submenus.

The menus and submenus can be accessed by scrolling or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In the standby mode, press the **Menu** soft key to access the menu mode. Press the **▲** or **▼** key to reach the desired main menu, e.g., **Settings**. Press the **Select** soft key to enter the **Settings** menu.
2. If the menu contains any submenus, for example, **Language**, find one you want by pressing the **▲** or **▼** key. Press the **Select** soft key to enter the submenu.

If the selected menu contains submenus, repeat this step.


3. Press the **▲** or **▼** key to find the setting of your choice. Press the **Select** soft key to confirm the chosen setting.

Notes:

- You can return to the previous menu level by pressing the **C** key.
- You can exit the menu without changing the menu settings by pressing the **☎**[®] key.

Accessing a Menu Function by Using its Shortcut

The menu items (menu, submenus and setting options) are numbered and can be accessed quickly by using their shortcut numbers. The shortcut number is shown in the bottom right next to the **➤** soft key on the display.

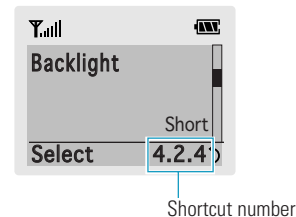

Note: The numbers assigned to each menu function are indicated in the list on page 52.

1. In the standby mode, press the **Menu** soft key.
2. Within three seconds, enter the first digit of the shortcut number. Repeat this for each digit of the shortcut number.

Example: Setting the **Backlight** option to **Short**

Press the **Menu** soft key, and enter **4, 2, 4, 2**.

Menu for entering the menu, **4** for **Settings**, **2** for **Lcd Control**, **4** for **Backlight**, **2** for **Short**.

List of Menu Functions

The following list shows the menu structure available and indicates the:

- Number assigned to each option
- Page on which you can find a description of each feature

1. Call Records

Page 57

- 1.1 Missed Calls
- 1.2 Incoming Calls
- 1.3 Outgoing Calls
- 1.4 Call Time
 - 1.4.1 Last Call Time
 - 1.4.2 Total Call Time
 - 1.4.3 Display Call Time
 - 1.4.4 Reset Timers

2. Messages

Page 59

- 2.1 Voice Mail
 - 2.1.1 Connect to Voice Server
 - 2.1.2 Voice Server Number
- 2.2 Read Messages
 - 2.2.1 New Inbox
 - 2.2.2 Old Inbox
 - 2.2.3 Outbox
 - 2.2.4 Delete All
- 2.3 Write Messages
- 2.4 Preset Message List
- 2.5 Setup
- 2.6 Message Alert Setting
- 2.7 Picture Messages

3. Tones

Page 70

- 3.1 Ring Tone
- 3.2 Ring Volume
- 3.3 Alert Type
- 3.4 Keypad Sound Type
- 3.5 Keypad Tone Length
- 3.6 Error Tone
- 3.7 Minute Minder
- 3.8 Connect Tone
- 3.9 Melody Composer

4. Settings

Page 76

- 4.1 Greeting Message
- 4.2 LCD Control
 - 4.2.1 Screen Mode
 - 4.2.2 Select Image
 - 4.2.3 Slide Menu
 - 4.2.4 Backlight
 - 4.2.5 Contrast
- 4.3 Service Light
- 4.4 Auto Redial
- 4.5 Answer Mode
- 4.6 External Keys
- 4.7 Short Cut Key
 - 4.7.1 Key Up
 - 4.7.2 Key Down
- 4.8 Active Flip
- 4.9 Service LED Color
- 4.10 Language
 - 4.10.1 Text Language
 - 4.10.2 Voice Guiding Language
- 4.11 Calling Card
- 4.12 Reset Setting

5. Organizer

Page 87

- 5.1 Calendar
- 5.2 To do List
- 5.3 Time & Date
 - 5.3.1 Set Time
 - 5.3.2 Set Date
 - 5.3.3 World Time
 - 5.3.4 Format
- 5.4 Alarm
- 5.5 Calculator

6. Security

Page 95

- 6.1 Change Lock Code
- 6.2 Change Security Code
- 6.3 Call Restriction
 - 6.3.1 Restrict All
Outgoing call
 - 6.3.2 Restrict All
Incoming call
 - 6.3.3 Restrict outgoing call
- 6.4 SOS Call List

7. Network Services

Page 98

- *7.1 Call Diverting
 - 7.1.1 Divert Always
 - 7.1.2 Busy
 - 7.1.3 No Reply
 - 7.1.4 Unreachable
 - 7.1.5 Cancel All
- *7.2 Call Waiting
- 7.3 Network Selection
- 7.4 Voice Privacy
- 7.5 NAM Selection
- 7.6 Set Service Code
 - 7.6.1 Call Diversion
 - 7.6.2 Call Waiting
- 7.7 Public System Selection

*1 available when you set the service code in the Set Service Code menu option (Menu 7.6).

8. Games

Page 103

- 8.1 Casino
- 8.2 Roulette
- 8.3 Black Jack
- 8.4 Sniper
- 8.5 Snake
- 8.6 Mole
- 8.7 Othello
- 8.8 Fortress
- 8.9 Ice Cave

9. WWW Services

- 9.1 Home
- 9.2 Favorite
- 9.3 http://
- 9.4 Wap Setting
- 9.5 Clear Cache

See WAP
Browser Guide

For details on the WAP browser feature, refer to the WAP Browser guide supplied with your phone.

10. Voice Functions

- 10.1 Voice Dial
- 10.2 Voice Command
- 10.3 Voice Memo

Page 105

Call Records

Via this menu, you can view the following phone calls:

- Missed
- Incoming
- Outgoing

The number and name, if available, display together with the date and time at which the call was made.

Note: Your phone can keep up to ten numbers in each record.

Missed Calls

Menu 1.1

This option lets you view the last incoming calls you failed to answer. Pressing the **Options** soft key allows you to:

- edit the number, if available, and dial it or save it in the Phonebook.
- delete the call from the list.

Incoming Calls

Menu 1.2

This option lets you view the last calls you received. Pressing the **Options** soft key allows you to:

- edit the number, if available, and dial it or save it in the Phonebook.
- delete the call from the list.

Outgoing Calls

Menu 1.3

This option lets you view the last calls you dialed. Pressing the **Options** soft key allows you to:

- edit the number and save it in the Phonebook.
- delete the number from the list.

Call Time

Menu 1.4

This option lets you view the timers for calls you made and received. The following options are available:

Last Call Time: shows the duration of the last call.

Total Call Time: shows the total duration of all calls made to or from your phone since the timer was lastly set to zero by using the **Reset Timers** option.

Display Call Time: allows you to set the phone to display the call time when the call is made or received. Select **Enable** to display the call time and **Disable** not to display it.

Reset Timers: allows you to reset the call timers; you must first enter the phone's security code (see page 95) and then press the **OK** soft key.

Note: The actual time invoiced for calls by your service provider may vary, depending on the network features, rounding-off for billing purposes and so forth.

Messages

The SMS (Short Message Service) function is a network service that may not be supported by your network. You can send a message by a text, a fax and an e-mail messaging systems, provided that these services are supported by your network.

When you receive new text messages, the  icon appears on the top line of the display. If the message memory is full, an error message displays and you cannot receive any new messages. Use the **Delete** option in the **Read Messages** menu (**Menu 2.2**) to delete obsolete messages.

Your phone has the message function to allow you to receive picture, ring tone or caller line icon messages from the Internet. For details about receiving the messages, see page 60.

Voice Mail

Menu 2.1

This menu allows you to access your voice mailbox, if your network supports this service.

Note: Please contact your service provider for more information. Depending on the service provider, you may be charged for accessing the voice server.

Connect to Voice Server: allows you to listen to your voice mails. Before using this feature, you must enter the voice server number obtained from your service provider (see menu option **2.1.2**).

Note: You can connect to the voice mail server of the service provider quickly by pressing and holding down the **0** key in idle mode.

Voice Server Number: allows you to change the voice mail server number.

To	Press the
enter the server number	corresponding numeric keys.
correct a digit	C key.
save the entered number	Save soft key.

Read Messages

Menu 2.2

Three message boxes are available:

New Inbox: used to store the messages that you have received but not read.

Old Inbox: used to store the messages that you have received and read.

Outbox: used to store the messages that you have already sent or will send.

1. Select the required box. The first message in the box displays with the following information:
 - Message number
 - Message status: New, Old, Not Sent, Sent (If you set the **Delivery Ack** menu to **ON**, the report is also shown; see page 64 for further details.)
 - Date and time at which the message is received (inbox only)

2. Press the **▲** or **▼** key to select the message you want to read.
3. To view a message, press the **View** soft key. The screen shows the:
 - sender's phone number, if the message is sent, or recipient's phone number.
 - message text.

To scroll through the message, press the **▲** or **▼** key. Press the **Options** soft key to select the following options:

Delete: allows you to delete obsolete messages.

Text Reply: allows you to reply by sending a text message.

Call Back: allows you to call the sender back.

Cut Number: allows you to extract a number from the message text, so that you can dial the number or save it in the Phonebook.

Send: allows you to send a message that you received or saved. You can:

- send the message.
- save and send the message.
- save but not send the message.

Edit and Send: allows you to edit a message for sending.

Note: The available options may vary, depending on the message status (New/Old, Not Sent or Sent, for example).

To delete all of the messages in the three message boxes, you can select **Delete All (Menu 2.2.4)**.

Write Messages

Menu 2.3

Via this menu, you can write a text message of up to 160 alphanumeric characters and send it to multiple destinations.

1. Press the ▲ or ▼ key to select a setting group on which you have set up default information on the SMS feature via the **Setup** menu (see the page 64), and press the **Select** soft key.
2. Create a message. For further information about how to enter the characters in your message, see page 39.
3. When you finish entering a message, press the **OK** soft key.

Note: While entering a message, pressing the # key allows you to start new line.

4. Select the desired option by pressing the ▲ or ▼ key, and press the **Select** soft key. The following options are available:
 - **Send Only:** sends the message immediately. After transmission, the message is cleared.
 - **Save and Send:** allows you to save a copy of the message. When you read the message in your outbox, **Sent** displays to indicate the message status.
 - **Save only:** allows you to save the message so that it can be sent later. You do not take the next step. When you read the message in your outbox, **Not sent** displays.

5. Enter the desired destination and press the **OK** soft key to send the message.

Preset Message List

Menu 2.4

Using this menu, you can preset messages that you send most frequently to retrieve when writing a new message. Scroll through the list by pressing the ▲ or ▼ key. When the required message number appears, press the **Options** soft key.

The following options are available:

Edit: allows you to write a new message or edit the selected preset message.

Note: For further information about how to enter the characters, refer to page 39.

Send Message: allows you to retrieve the selected message for sending. Once you have completed the message, you can send, save and send, or simply save it.

Delete: allows you to delete the selected message.

Setup

Menu 2.5

Via this menu, you can set up default information for the SMS feature. A setting group is a collection of settings required to send messages. Five setting groups are available.

Select the desired number by pressing the ▲ or ▼ key, and press the key or the **Select** soft key. Then, set up the options for the group.

The following setup options are available:

Setting Name: allows you to give a name to the setting group currently being defined.

Callback Number: allows you to set the phone number to which the recipient of your SMS message may send you a reply message via your message center, if the service is provided by the network.

Manual Ack: allows you to activate or deactivate the manual acknowledgement function. When this function is activated, the recipient can send you an answer to your message by one touch of a number key.

Delivery Ack: allows you to activate or deactivate the delivery acknowledgement function. When this function is activated, the network informs you whether or not your message has been read by the recipient.

Privacy: allows you to set the restriction feature. When this option is set to **Restricted**, the recipient must have the password which you have set when writing a message to see the message. If you do not want to use the feature, select **Not Restricted**.

Urgency: allows you to set the urgency status of the messages. **Bulk**, **Normal**, **Urgent** and **Very Urgent** are available.

Type: allows you to set the type of messages. The available types are **Text** and **E-mail**.

Message Alert Setting

Menu 2.6

This option allows you to set your phone to beep different tones depending on the urgency status of incoming messages; **Bulk**, **Normal**, **Urgent**, and **Very Urgent**.

After you select one of the urgency options, the following types are available:

Light Only: the service light on the top left-hand corner of the phone flashes.

Vibration: the phone vibrates but does not sound.

Single Beep: the phone beeps once.

SMS Tone x: the phone uses an SMS tone.

Picture Message

Menu 2.6

In this menu, you can send an SMS message containing pictures. Your phone has several preset pictures that can be replaced with pictures received from other sources, such as the internet or remote phones.

Select the desired picture from the list and press the **View** soft key. When the picture displays, press the **Options** soft key. The following options are available:

Delete: deletes the picture from the phone. The preset picture will be restored.

Text Reply*: allows you to send a text reply to the sender of the selected picture.

Call Back*: allows you to call the sender back.

Cut Number*: allows you to extract a number from the message, so that you can call the number or save it in the Phonebook.

Send: allows you to send the picture message using the selected picture. Note that the recipient's phone must support the Picture Messaging feature.

Edit Text*: allows you to edit text from the message.

*: unavailable when the selected picture is one of the preset pictures.

Rename: allows you to change the title of the picture. For details about entering characters, see page 39.

Notes:

- Picture messages are stored in the phone memory. You cannot view them if you use your SIM card in another phone.
- Each picture message is made of several text messages. Therefore, sending one picture message may cost more than sending one text message.

Receiving Pictures, Ring Tones, or Caller Line Icons

When you receive a message from the Internet, you can hear an alert beep and a text notification appears on the display; "Picture Message," "Ring Tone" or "Caller Line Icon." You have the option of saving these items in the phone's memory or discarding them.

Picture Message

You may send a received picture as an SMS message to another phone that supports this feature.

When you receive a picture message:

To	Then
view the picture	press the View soft key.
save the picture	- press the Options soft key. - select Save Picture, and press the Select soft key. - select a preset picture to be replaced, and press the Select soft key.
discard the picture	- press the Options soft key. - select Discard, and press the Select soft key.
use the saved picture	go to page 66.

Ring Tone

You may set a received tone as your phone's ring tone.

When you receive a ring tone message:

To	Then
listen to the ring tone	- press the Options soft key. - select Playback and press the Select soft key. - press the Stop soft key to stop playing back.
save the ring tone	- press the Options soft key. - select Save and press the Select soft key. - select a location and press the Select soft key. - select the Yes or No soft key when the phone asks if you want to set the ring tone to the received tone.
discard the message	- press the Options soft key. - select Discard, and press the Select soft key.
use the saved ring tone	go to page 71.

Caller Line Icon

You may use the received icons as a graphic for a caller group. When the memory for icons is full, you are allowed to select an old one to replace. Note that the eight default icons cannot be replaced with the downloaded ones.

When you receive a caller line icon message:

To	Then
view the icon	press the View soft key.
save the icon	- press the Options soft key. - select Save and press the Select soft key. - if necessary, select an icon to be replaced, and press the Select soft key.
discard the icon	- press the Options soft key. - select Discard and press the Select soft key.
use the saved icon	go to page 37.

Tones

You can use the Tones feature to customize various settings, such as the:

- ringing tone or melody, volume and type.
- sounds made when you press a key, make an error or receive a message.

Ring Tone

Menu 3.1

This option allows you to select the desired ringer tone. You can choose from different predefined bells and melodies. Each time you select a tone, it sounds for a few seconds.

You can download ring tones from the Internet, and can compose tones, using the **Melody Composer** menu (**Menu 3.9**).

Ring Volume

Menu 3.2

This option allows you to adjust the volume level of the ringer.

Press the ▲ or ▼ key to increase or decrease the level. You can also use the volume keys on the left side of the phone. The greater the number of bars you see, the greater the volume is.

Alert Type

Menu 3.3

This option allows you to indicate how you are to be informed of any incoming calls. The following options are available.

Light Only: only the backlight is switched on; the phone neither rings nor vibrates.

Melody: the phone rings using the ringer melody selected in the **Ring Tone** menu (**Menu 3.1**).

Vibration: the phone vibrates but does not ring.

Vibra+Melody: the phone first vibrates three times and then starts ringing.

Keypad Sound Type

Menu 3.4

The option allows you to select the tone that the keypad generates when you press a key.

Beep, Drum and **Piano** are available.

Keypad Tone Length

Menu 3.5

This option allows you to select **Short** or **Long** DTMF (dual-tone multi-frequency) tones. When you use a tele-service, such as accessing your bank account and press the keys to enter numbers into the tele-service, you are sending DTMF tones. The system used by the bank or other service determines if you need short or long DTMF tones. If the service is digital, as most are, short DTMF tone will almost always work. However, some new systems and almost all older (analog) system require you to use long DTMF tones.

Error Tone

Menu 3.6

This option allows you to select how the phone informs you that you have made a mistake.

The following options are available:

OFF: the phone does not beep.

ON: the phone beeps to indicate an invalid entry.

Minute Minder

Menu 3.7

This option allows you to specify whether the phone must beep every minute during an outgoing call to keep you informed of the length of your call.

The following options are available:

OFF: the phone does not beep.

ON: the phone beeps every minute.

Connect Tone

Menu 3.8

You can set your phone to beep when your call is connected to the remote phone (or the remote phone is ringing depending on your network).

The following options are available:

OFF: the phone does not beep.

ON: the phone beeps when your call is connected.

Melody Composer

Menu 3.9

This option allows you to compose your own melody to be used as the ring tone. Three octaves are available. A maximum of 100 notes can be entered. You can adjust the length of the notes and add rests, as required.

Composing a Melody

You can compose two melodies. When you access the menu, the names of any melodies created displays. Otherwise, **Melody 1** and **Melody 2** appear. Select the melody that you wish to create or edit.

To	Press the
compose a melody	Edit soft key.
insert a note	Next soft key.
move a note a semitone up	2 key.
move a note a semitone down	8 key.
change the length of a note	4 key one or more times until the note is of the required length.
delete a note	C key.
enter a rest	6 key one or more times for the required length of time.

To	Press the
listen to your melody	Listen soft key.
modify your melody	Modify soft key.

Saving a Melody

When you are satisfied with your melody after listening to it, you can save the melody and indicate that you wish to use it as the ring tone.

1. Press the **Save** soft key.
2. Enter a title for the melody, and press the **OK** soft key.

Note: For further details about how to enter characters, refer to page 39.

You are asked if the melody is to be set as the ring tone.

3. To use the melody as the ring tone, press the **Yes** soft key. The melody is saved and set to the current ring tone.
Otherwise, press the **No** soft key. The melody is saved only.

Note: You can also select the melodies composed via the **Ring Tone** menu (**Menu 3.1**).

Settings

Many different features of your phone can be customized to suit your preferences via the **Settings** menu.

Greeting Message

Menu 4.1

This option allows you to set a greeting to be displayed briefly when the phone is switched on. The current message displays.

To	Press the
clear the existing message	C key and hold it down until the message is cleared.
enter a new message	appropriate alphanumeric keys. For further details about how to enter characters, refer to page 39.
save the message	OK soft key.

LCD Control

Menu 4.2

Using this menu option, you can set various settings for the display.

Screen Mode

You can select the screen to be displayed in the standby mode.

The following options are available:

Normal: the LCD displays the service provider's name and the current time and date.

Image Display: the LCD displays the image selected in the **Select Image** option. With the flip cover open, the LCD displays the same information as on the normal screen.

Clock: the LCD displays the clock.

Select Image

This option allows you to select the image to be displayed when you set the Screen mode option to **Image Display**.

Slide Menu

This option allows you to determine how the menus display.

Note: This menu may be unavailable depending on your network.

The following options are available:

Disable: the menus are not slid.

Enable: the menus seem to slide into position from the top, bottom, left or right, as applicable.

Backlight

You can select whether or not the phone uses the backlight. A marginal increase in the standby/talk time can be achieved by turning the backlight off. the ▲ or ▼ key.

The following options are available:

Off: the backlight is not used.

Short: the backlight comes on when you press a key or receive a call and switches off 10 seconds after the last key is pressed.

Long: the backlight comes on when you press a key or receive a call and switches off 20 seconds after the last key is pressed.

Contrast

This option allows you to adjust the brightness of the LCD screen by pressing the ▲ or ▼ key. You can also use the volume key on the left side of the phone.

Each time you press the key, you can see the LCD changing according to the current value.

Service Light

Menu 4.3

This option allows you to select whether or not the service light at the top left-hand corner of the phone is used.

The following options are available:

OFF: the service light is not used.

ON: the service light flashes when the phone is ready for use.

Auto Redial

Menu 4.4

With the Auto Redial function, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between two call attempts varies depending on your network.

The following options are available:

OFF: the number is not redialed.

ON: the number is redialed automatically.

Answer Mode

Menu 4.5

This option allows you to select how incoming calls are to be answered.

The following options are available:

Open Answer: to answer a call, you can simply open the folder. When it is already open, pressing the  key answers the call.

AnyKey Answer: to answer a call, you can press any key except the  key. Pressing the  key mutes the ringer.

SendKey Answer: to answer a call, you must press the  key. Pressing the  key mutes the ringer.

External Keys

Menu 4.6

This option enables or disables functions of two soft keys and the navigation keys when the flip cover is closed.

The following options are available:

Disable: the keys do not function with the flip cover closed.

Enable: the keys function and you can use the menu functions with the flip cover closed.

Short Cut Key

Menu 4.7

The navigation keys can also be used as shortcut keys. When pressed in the standby mode, it allows you to access specific menu options directly. Using this menu, the following menu options can be assigned to the shortcut keys:

- **Calendar** (Menu 5-1)
- **Calculator** (Menu 5-5)
- **Alarm** (Menu 5-4)
- **Messages** (Menu 2)
- **Tones** (Menu 3)
- **Games** (Menu 8)
- **To Do list** (Menu 5-2)
- **Phonebook** (with the entries listed by name)
- **New Inbox** (Menu 2-2-2)
- **Voice Memo** (Menu 10-3)
- **WWW Services** (Menu 9)

1. Select the key to be used as a shortcut key by pressing the ▲ or ▼ key and press the **Select** soft key:
 - **Key Up**
 - **Key Down**
2. Select the menu option to be assigned to the key by pressing the ▲ or ▼ key.

Note: To deactivate a shortcut key, select **None**.

3. Press the **Select** soft key.

Active Flip

Menu 4.8

This option allows you to use the voice dialling or voice command feature simply by opening the flip cover.

The following options are available:

Off: the active flip feature is deactivated.

Voice Dial: you can use the **Voice Dial** feature automatically.

Voice Command: you can use the **Voice Command** feature automatically.

Service LED Color

Menu 4.9

You can select the color of the LED at the top left-hand corner of the phone to indicate that the service is available.

Select the desired color from **Green, Yellow, Orange, Violet, Blue** and **Sky Blue**.

Language

Menu 4.10

You can select a display language and a voice prompt language.

The following options are available:

Text Language: you can select a display language.

Voice Guiding Language: you can select a voice prompt language.

You can select a language from **English, Español** and **Português**.

Calling Card

Menu 4.11

When you use a calling card for long distance calls, you must send the service code and the card number to the calling card service system. Using this menu, you can save these calling card information to send them automatically when you make calling card calls.

Enter 4-digit security code and press the **OK** soft key to access the Calling Card menu.

Saving Calling Card Information

1. Scroll to a calling card number by pressing the ▲ or ▼ key and press the **Select** soft key.

2. If you want to set the card name, press the **Select** soft key. Enter the name as needed.

For further details on entering characters, see page 39.

3. When you finish entering name, press the **OK** soft key. The name is saved.
4. Press the ▼ key to move to the **Card Number** menu, and press the **Select** soft key.
5. Enter the card number (and/or PIN if required) as listed on the back of the calling card.

To enter a pause, "P" before the second number, press and hold the * key. The number after "P" is sent only by pressing the  key when you make a call with the calling card.

Note: The order of the numbers which you must enter may vary depending on the dialing sequence your card uses.

6. When you finish entering the number, press the **OK** soft key.
7. To return to idle mode, press the  key.

Selecting a Calling Card

You can set the default card to use for making a calling card calls. The number stored in the selected card is sent when you make calling card calls.

1. Scroll to the desired calling card by pressing the ▲ or ▼ key and press the **Select** soft key.

2. Select **Set Default** by pressing the ▲ or ▼ key and press the **Select** soft key.
3. The display shows the number saved for the calling card. If you are satisfied, press the **Set** soft key.
4. To return to idle mode, press the [Ⓟ] key.

Making Calls Using the Calling Card

Note: The procedure may not apply to all calling cards. Please look at the back of your calling card or contact your phone company for instructions.

1. Make a call to the calling card service system.
2. When you are connected, press the **Options** soft key and select **Callcard Service** by pressing the ▲ or ▼ key.
3. Press the **OK** soft key.
4. When you hear the prompting tone from the service system, press the  key to send the card numbers.
5. Dial the number of the desired remote phone.

Reset Setting

Menu 4.12

You can easily reset the menu settings to its factory default status.

Enter the 4-digit security code and press the **OK** soft key. The phone immediately resets all settings to default status.

Note: The security code is preset to “0000.” To change this code, refer to page 96.

Organizer

The Organizer feature enables you to:

- view the calendar and organize your schedule.
- define a list of things to do.
- set the current date and time.
- set an alarm so that the phone rings at the specified time to remind you of an appointment, for example.
- use the phone as a calculator.

Calendar

Menu 5.1

With the Calendar feature, you can:

- consult the calendar.
- write memos to keep track of your schedule and trigger an alarm if necessary.

Consulting the Calendar

When you select the **Calendar** menu (**Menu 5.1**), the calendar displays. The following options are available when you press the **Options** soft key:

Search All: displays all of the memos set, regardless of the day and starting with the oldest. To scroll through the memos, press the **▲** or **▼** key.

Delete All: allows you to delete all of the memos. You are asked to confirm your selection.

Go to date: allows you to jump to a specific date.

Writing a Memo

To write or edit a memo on a specific date:

1. Select the required date in the calendar, by using the navigation keys.

Note: Press the upper portion of the volume key to skip to the previous month or the lower portion to skip to the next month.

2. Press the **Select** soft key.
An empty memo screen displays to allow you to enter your memo.
3. Enter your memo and then press the **OK** soft key.

Note: For further details about how to enter characters, refer to page 39.

You are asked if you wish to set an alarm.

4. If you want the alarm to ring on the chosen day, press the **Yes** soft key.
Otherwise, press the **No** soft key.
5. If you pressed **Yes**, set the time for the alarm and press the **OK** soft key.
A check mark displays in front of the date in the calendar to indicate that a memo exists.

Editing a Memo

If you select a day for which a memo already exists, you can press the **Edit** soft key to edit the memo displayed.

Note: For further details about how to enter characters, refer to page 39.

Once you have finished editing the memo, press the **OK** soft key. The following options are available when you press the **Options** soft key.

Alarm: allows you to set the alarm to ring on the chosen day.

Erase: allows you to delete the memo.

Copy to: allows you to copy the memo to another date.

Move to: allows you to change the date and time of the memo.

To do List

Menu 5.2

This feature allows you to:

- enter a list of tasks to be done.
- assign a priority and a deadline to each task.
- sort the tasks by priority and status mark.

Creating the To do List

1. Press the **New** soft key.
2. Enter the first task.

Note: For further details on how to enter characters, see page 39.

3. Press the **OK** soft key.
4. Select **High** or **Low** priority by pressing the ▲ or ▼ key, and press the **Select** soft key.

5. Enter your deadline. If you do not want to define the deadline, press the **Skip** soft key.
6. Press the **OK** soft key to save the task.

Editing the To do List

If tasks are already defined in the To Do List when you select the **To do List** menu option (**Menu 5.2**), the current contents display with the associated priority and status mark. The following options are available:

To	Then
view the details for a specific task	• highlight the task. • press the View soft key.
change the status of a specific task (□ or ✓)	• highlight the task. • press the ✕ key to mark the task as completed as of the current date and time. or • highlight the task. • press the Options soft key. • select the Mark option. • select the appropriate status.
create a new task	• press the Options soft key. • select the New option. • enter the text, priority and deadline for the task.
edit an existing task	• highlight the task. • press the Options soft key. • select the Edit option. • change the text, priority and deadline for the task.

To	Then
sort the existing tasks by priority or status	- press the Options soft key. - select the Sort option. - select the sort criterion (High, Low, Done, Undo).
copy a task	- highlight the task. - press the Options soft key. - select the Copy option. - change the text, priority and deadline for the task as required.
delete a task	- highlight the task. - press the Options soft key. - select the Delete option.
delete all tasks	- press the Options soft key. - select the Delete all option. - confirm the deletion by pressing the OK soft key.

Time & Date

Menu 5.3

This option allows you to change the current time and date displayed. You can also check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world.

Set Time: allows you to enter the current time. You can choose the time format via the **Format** menu (**Menu 5.3.4**).

Note: Before setting the time, you must specify your time zone, via the **World Time** menu (**5.3.3**).

Set Date: allows you to enter the day, month and year. You can change the date format via the **Format** menu (**Menu 5.3.4**).

World Time: allows you to check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world, by pressing the ▲ or ▼ key.

The screen shows the:

- city name
- current date and time
- time difference between the selected city and your city if you have set the local time (see below for further details) or GMT (by default)

To select the time zone in which you are located:

1. Select the city corresponding to your time zone by pressing the ▲ or ▼ key.
The local date and time display.
2. Press the **Set** soft key.

Format: allows you to change the time and date formats.

Time format: 24 Hours
12 Hours

Date format: YYYY/MM/DD (year/month/day)
DD/MM/YYYY (day/month/year)
MM/DD/YYYY (month/day/year)

Alarm

Menu 5.4

You can set an alarm to ring at a specific time.

Note: To meet FAA safety guidelines, the alarm does not function when the phone is off.

The following frequency options are available:

Once Alarm: the alarm rings only once and is then deactivated.

Daily Alarm: the alarm rings every day at the same time.

Monday -> Friday: the alarm rings from Monday to Friday at the same time.

Monday -> Saturday: the alarm rings from Monday to Saturday at the same time.

Weekly Alarm: the alarm rings every week on the same day and at the same time.

To set an alarm:

1. Choose the location where you want to save the alarm settings and press the **Select** soft key.
2. Choose the alarm frequency option and press the **Select** soft key.
3. Enter the required time and press the **OK** soft key.
3. If you select **Weekly alarm** in step 1, select the day of the week and the **OK** soft key.

To stop the alarm when it rings, press the **Exit** soft key.

Remove Alarm: deactivates the alarm.

Calculator

Menu 5.5

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication and division.

1. Enter the first number using the numeric keys.
2. Press the right soft key until the required arithmetic symbol appears: **+** (add), **-** (subtract), **x** (multiply), **/** (divide).
3. Enter the second number.
4. Repeat steps 2 to 3 as many times as required.

Notes:

- To erase any mistakes and clear the display, press the **C** key.
- To include a decimal point or a bracket, press the left soft key until the required symbol displays.

5. To calculate the result, press the  key.
6. To end the calculation, press the  key.

Security

The Security feature enables you to restrict the use of your phone to:

- the people of your choice.
- the types of calls of your choice.

Change Lock Code

Menu 6.1

The lock code is a password for locking or unlocking the phone. The lock code is preset to “0000” at the factory. This menu allows you to change your current lock code to a new one.

Before you can specify a new lock code, you must enter the current code. Then, enter a new code and enter it again to confirm.

Change Security Code

Menu 6.2

The security code is used for restriction of the use of your phone. The security code is preset to “0000” at the factory. This menu allows you to change your current security code to a new one.

Before you can specify a new security code, you must enter the current code. Then, enter a new code and enter it again to confirm.

Call Restriction

Menu 6.3

The call restriction feature allows you to restrict your calls.

Call restriction can be set up in the following ways:

Restrict All Outgoing call: calls cannot be made.

Restrict All Incoming call: calls cannot be received.

Restrict outgoing call: calls to the phone numbers which you have specified cannot be made.

To restrict the all outgoing or all incoming calls:

1. Select **Restrict All Outgoing call** or **Restrict All Incoming call** by pressing the ▲ or ▼ key and then press the **Select** soft key.
2. Select **Enable** to the feature on, and press the **Select** soft key.

If you want to set the restriction off, select **Disable**.

3. Enter your security code and press the **OK** soft key.

To set the phone numbers to be restricted:

1. Select **Restrict outgoing call** by pressing the ▲ or ▼ key and then press the **Select** soft key.
2. Enter your security code and press the **OK** soft key.

3. Select an empty location by pressing the ▲ or ▼ key, and press the **Options** soft key.
4. Select **Edit**, and then the **OK** soft key. If a number has already been saved, this option allows you to edit the number.

If you want to erase a saved number, select **Erase**. When a confirmation displays, press the **Yes** soft key.

5. Enter the phone number and press the **OK** soft key. The phone number is saved and now you cannot make a call to the number.

SOS Call List

Menu 6.4

Your phone provides emergency numbers for SOS calls programmed by the service provider. Three numbers including 911 can be manually dialed at any time even when the phone is locked or all of the outgoing calls are restricted.

To make an SOS call when the phone is locked, press the **SOS** soft key, select the desired number saved in the SOS call list, and then press the **Call** soft key

Network Services

These menu functions are network services. Please contact your service provider to check for their availability and subscribe to them, if you wish.

Call Diverting

Menu 7.1

Note: For using the Call Diverting service, you must set the service code for it. Depending on the Set Service Code setting, this menu may not appear. For details, see page 101.

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

Call diverting can be set up in the following ways:

1. Select the type of the call diverting options by pressing the ▲ or ▼ key, and press the **Select** soft key.
 - **Divert Always:** all calls are diverted.
 - **Busy:** calls are diverted if you are already on another call.
 - **No Reply:** calls are diverted if you do not answer the phone.
 - **Unreachable:** calls are diverted if you are not in an area covered by your service provider.
 - **Cancel All:** all call diverting options are canceled.

2. When **Activate** highlights, press the **Select** soft key.
3. Enter the number to which the calls are to be diverted, and press the **OK** soft key.

Note: The **Names** soft key visible when you do not enter anything allows you to search for a number in your Phonebook.

The phone sends your setting to the network and the network's acknowledgement displays.

You can deactivate each call diverting setting by selecting the **Cancel** option.

Call Waiting

Menu 7.2

This network service enables you to be informed when someone is trying to reach you during another call.

Note: For using the Call Waiting service, you must set the service code for it. Depending on the Set Service Code setting, this menu may not appear. For details, see page 101.

The following options are available:

Activate: activates the Call Waiting feature. You can answer an incoming call while you have a call in progress. See page 48 for answering a waiting call.

Cancel: deactivates the Call Waiting feature.

Network Selection

Menu 7.3

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if it has a valid roaming agreement with your home network.

The following options are available:

Automatic: your phone automatically searches for a network available and chooses the appropriate one. Every time you switch your phone on, this menu resets to **Automatic**.

Manual: your phone searches for available networks, and then displays them. Press the ▲ or ▼ key until the preferred network highlights and then press the **OK** soft key.

New Search: your phone begins a new search for new Private and Residential systems. When finding the best new system, the phone displays it. Then you can confirm by pressing the **Select** soft key, or start another search by pressing the **Next** soft key.

Voice Privacy

Menu 7.4

Used only in digital networks, Voice Privacy encrypts the voice channel so that people cannot eavesdrop on your call conversation. If you turn this feature on and voice privacy becomes inactive for any reason your phone displays “Voice privacy not active” and beeps.

The following options are available:

Activate: turns this feature on. Your calls are secured.

Deactivate: turns this feature off.

Note: This feature may not be available in all of the areas. Contact your service provider for details and availability.

NAM Selection

Menu 7.5

The service provider programs your phone with the phone number and system information when your phone is first activated. This is called a Number Assignment Module (NAM).

For example, your phone can be activated in up to 4 different service areas each giving your phone a different phone number or account.

Only one number can be active at a time. When you select a phone number, you are also selecting which system to be used as your home system. The first phone number displayed with this menu is the currently selected number.

Notes:

- It may not be necessary to have four NAMs for your phone if your service provider has service or roaming agreements for each area in which you wish to use your phone. Contact your service provider for details.
- You need at least one active number to make a call. You cannot change the NAM to another during a call.

Set Service Code

Menu 7.6

For using the network services, such as **Call Diverting** and **Call Waiting**, you must set the service codes supplied by your service provider with this menu. For more information on the service code, contact your service provider.

Call Diversion: allows you to set the codes for using each of the options in the Call Diverting menu; **Divert Always, Busy, No Reply, Unreachable** and **Cancel All** .

Call Waiting: allows you to set the codes for using each of the options in the Call Waiting menu; **Activate** and **Cancel** .

After selecting the desired option, enter the service code and press the **OK** soft key. The service code is saved and the option is selectable when you access the appropriate menu.

Public System Selection

Menu 7.7

Note: This menu may not be shown depending on the service provider.

When your system leaves its home system, it is roaming. Roaming is a feature which is only relevant in areas where there are usually at least two service providers which are referred to as “A” and “B” and have valid roaming agreements. When the phone is roaming, it can automatically search for home-type systems (same type as your home system) or non-home type systems (opposite type as your home system). Also, your service provider has programmed a list of preferred systems into your phone.

The public system selection feature of your phone enables you to choose how your phone will roam. The following options are available:

Home Type: When the service is not available in your home system, it will search for a home type, preferred first.

Non HomeType: When the service is not available in your home system, it will search for a non-home type, preferred first.

Anysystem: When service is not available in your home system, the phone searches for a preferred system of either type, then a home type system, then a non-home type system.

HomeOnly: The phone uses its home system only that is it will not roam.

Games

Using this feature, you can play different games with the phone:

- Casino
- Roulette
- Black Jack
- Sniper
- Snake
- Mole
- Othello
- Fortress
- Ice Cave

Once you have selected a game, the following options are available:

Play/New game: allows you to start a new game.

Configuration: allows you to configure the phone for the chosen game (backlight and sound settings). To adjust each setting, highlight the **Backlight** or **Sound** option by pressing the ▲ or ▼ key, and then switch between **ON** (✓) and **OFF** (□) by pressing the **On/Off** soft key.

Instructions/Key info: describes the buttons used by the game. If necessary, press the ▲ or ▼ key to see a more detailed description.

Continue: allows you to continue the game you previously saved. This option is available only when you saved a game.

High Score: enables you to view the highest score recorded for the selected game. You can also reset this score by pressing the **Reset** soft key.

The options may differ and some options may not be shown depending on games.

If you break the current record for the game, the phone displays the High Score screen.

To stop playing a game, press the **C** or  key.

Voice Functions

You can use the Voice feature to customize various settings, such as the:

- Voice Dial
- Voice Command
- Voice Memo

Voice Dial

Menu 10-1

The voice dialling feature allows you to make phone calls by saying a voice tag that has been added to a desired name and phone number. Any spoken word, for example a name, can be a voice tag.

Before using voice dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- The voice tags are sensitive to the background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call, hold the phone in the normal position close to your ear.
- The maximum length for the voice tag recording is about 1.5 seconds, but very short names are not accepted.
- You can store up to twenty voice tags in the phone's memory.
- The phone must be in a service area with adequate cellular signal strength.

Record

This option allows you to record names and register numbers for voice dialling.

Say the name you want to use for voice dialling after you hear a voice prompt. For best results, use names with at least two syllables, or use both a “first” and last name. The phone stores the name as a “first” sample, and then prompts you to say the name two times.

Respond to the prompts by repeating the name. The phone stores the name and then requests the phone number.

To store the number, press the **OK** soft key. Follow the instructions described on page 30 to complete storing number into your internal phonebook.

Act

This option activates voice dialling.

You hear a voice prompt and **Say Name** displays. Say the voice tag clearly. If no match for the voice tag is found or recognized, the phone may ask you to try again. The phone automatically dials the number of the recognized voice tag.

Note: This option appears only when you have already recorded some names.

Delete One

This option allows you to delete an individual voice tag. The corresponding phone number remains in the phonebook but the voice tag is deleted.

If the name displayed is	Press the
to be deleted	OK soft key.
<u>not</u> to be deleted	▲ or ▼ key. The next name is displayed.

To exit the **Voice Dial Delete One** option, press the **↵** soft key.

Play One

This option allows you to play back a recorded voice tag.

Delete All

This option allows you to delete all of the voice tags. The corresponding phone numbers remain in the phonebook but the voice tags are all deleted. Press the **OK** soft key when the message “Delete All Confirm?” displays.

Otherwise, press the **Cancel** soft key to exit the function without deleting the voice tags.

Voice Command

Menu 10-2

This menu allows you to get a quick access to the frequently used menus by saying your own voice command.

You can select the following functions:

Record: Depending on the SIM, the most frequently used menu functions are provided to be recorded with your voice. The menus are preset to **OFF** at the factory, indicating that they are not recorded. When voice commands are recorded successfully, the menus are changed to **ON** on the display.

Act: Activates the voice command. Use this menu to access the menu with the recorded voice command.

Play One: Plays a voice commands you have recorded.

Delete All : Deletes all of the commands you have recorded.

Voice Memo

Menu 10-3

You can use the Voice Memo feature to :

- record voice memos.
- play the recorded voice memos.
- delete one or all of the voice memos.

Record: This option allows you to record a memo. The screen displays the:

- memo location.
- date and time when the memo was recorded.
- recording time counter.

The maximum recording time is about 35 seconds. If you want to record for longer, press the **Continue** soft key. **Split** appears instead of **Continue**. You can continue recording and the rest of the memo is stored in the next memo location.

To stop recording, press the **Stop** soft key.

Note: If all of the memo locations are full, you must delete an old memo before recording a new one.

Replay & Delete: This option allows you to play back a recorded message and delete it, if you want.

Press the **Skip** soft key to skip to the next memo and press **Stop** soft key to stop the playback.

Delete All: This option allows you to delete all of the memos. Press the **OK** soft key to confirm.

Edit Title: This option allows you to change the title of the selected memo.

Solving Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary service call.

“No service”, “Network failure” or “Not done” is displayed

- The network connection was lost. You may be in a weak reception area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have chosen to restrict outgoing calls.

Your correspondent cannot reach you

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have chosen to restrict incoming calls.
- You may be in a weak signal area. Move and try again.

Your correspondent cannot hear you speaking

- Have you switched off the microphone (mute)?
- Are you holding the phone close enough to your mouth? The microphone is located on the bottom center of the phone.

The phone starts beeping and ***Warning** Low Battery** flashes on the display**

- The battery power is weak. Replace the battery and recharge it.

The audio quality of the call is poor

- Check the signal strength indicator on the display (); the number of bars after it indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialed when you recall a Phonebook entry

- Check that the numbers have been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not enable you to solve the problem, take a note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP). Report 86
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code 6.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.*

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg(w/kg) averaged over on gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safety exposure.

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only Samsung-approved accessories. When carrying the phone while it is on, use the specific Samsung belt-clip that has been tested for compliance.

Use of non-Samsung-approved accessories may violate FCC RF exposure guidelines and should be avoided.

For additional information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC) RF Safety program (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”):

<http://www.fcc.gov/oet/rfsafety>

Cellular Telecommunications Industry Association (CTIA): <http://www.wow-com.com>

World Health Organization (WHO) International Commission on Non-ionizing Radiation Protection (select Qs & As):

<http://www.who.int/emf>

United Kingdom, National Radiological Protection Board: <http://www.nrpb.org.uk>

U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health:

<http://www.fda.gov/cdrh/consumer/>

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.

- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips.

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.

5. Do not take notes or look up phone numbers while driving. Jotting down a To Do list or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special non-emergency wireless number.



Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize potential interference

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Other Important Safety Information

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Switch off your phone before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.

Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Emergency Calls

Important!

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call, proceed as follows.

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children's.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not touch the phone with wet hands while it is charging. Doing so may give you an electric shock or damage the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.

- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

FCC Compliance Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference,
and (2) This device must accept any interference received.

Including interference that may cause undesired operation.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features on your mobile phone, here are a few definitions.

Antenna

A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Call Diverting

Ability to reroute calls to another mobile or fixed line.

Call Holding

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

Calling Line Identification Services (Caller-ID)

Services allowing subscribers to view or block the telephone numbers of callers.

Call Waiting

Ability to inform users that they have an incoming call when engaged on another call.

Conference Calling

Ability to establish a conference call involving up to two additional parties.

Hands-Free

A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.

LCD (Liquid Crystal Display)

Commonly used to refer to the screen display on the wireless phone.

Phone Password

Lock code used to unlock the phone when you have selected the option to lock it automatically each time it switches on, and security code used to restrict the use of your phone.

Roaming

Use of your phone when you are outside your home area (when travelling for example).

SMS (Short Message Service)

Network service for sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

Soft Keys

Keys marked  and  on the phone, the purpose of which:

- Varies according to the function that you are currently using
- Is indicated on the bottom line of the display just above the corresponding key

TDMA

Time division multiple access (TDMA) is a digital transmission technology that allows a number of users to access a single radio-frequency (RF) channel without interference by allocating unique time slots to each user within each channel. The TDMA digital transmission scheme multiplexes three signals over a single channel. The current TDMA standard for cellular divides a single channel into six time slots, with each signal using two slots, providing a 3 to 1 gain in capacity over advanced mobile-phone service (AMPS). Each caller is assigned a specific time slot for transmission.

Voice Mail

A computerized answering service that answers a call, plays a greeting and records a message.

Index

A

Accessories • 7
 Active flip **(4.8)** • 83
 Adjusting volume • 21
 Alarm **(5.4)** • 94
 Alert Type **(3.3)** • 72
 Answering
 a call • 22
 a second call • 48
 Answer mode **(4.5)** • 81
 Auto Redial **(4.4)** • 80

B

Backlight • 12; 79
 contrast • 79
 Batteries
 charging • 15
 installing • 13
 low battery indicator • 16
 precautions • 115
 removing • 14

C

Calculator **(5.5)** • 95
 Calendar **(5.1)** • 88
 Caller
 group • 37
 line icon • 67
 Calling card **(4.11)** • 84
 Calls
 answering • 22
 a second call • 48
 calling card • 46
 conference • 49
 diverting **(7.1)** • 99
 ending • 19
 holding • 47
 incoming **(1.2)** • 57
 making • 19
 missed • 23; 57
 outgoing **(1.3)** • 58
 records **(1)** • 57

 redialing automatically • 80
 restriction **(6.3)** • 97
 SOS **(6.4)** • 98
 time **(1.4)** • 58
 via the phonebook • 20
 waiting **(7.2)** • 100
 Care • 125
 Changing
 lock code **(6.1)** • 96
 security code **(6.2)** • 96
 Characters
 entering • 39
 Charging batteries • 15
 Composer
 Melody **(3.9)** • 75
 Conference calls • 49
 Connect
 to Voice Mail **(2.1)** • 59
 tone **(3.8)** • 74
 Contrast • 79
 Correcting numbers • 19

D

Date
 format **(5.3.4)** • 93
 setting **(5.3.2)** • 93
 Deleting
 memos • 90
 missed calls • 23
 phonebook numbers • 34
 tasks • 92
 voice memo • 110
 Display • 10
 contrast • 79
 icons • 11
 setting the
 language **(4.9)** • 83
 Diverting calls **(7.1)** • 99

E

Earpiece
 adjusting the volume • 21
 Editing
 memos • 89
 messages • 66
 missed calls • 24
 phonebook numbers • 34
 To Do List • 91
 Erasing
 memos • 89
 missed calls • 23
 phonebook numbers • 34
 tasks • 92
 voice memo • 110
 Error Tone **(3.6)** • 73
 External Keys **(4.6)** • 81

F

Functions
 selecting • 27

G

Games **(8)** • 105
 Greeting Message **(4.1)** • 77
 Groups
 caller • 37

H

Holding calls • 47

I

Icons
 description • 11
 Identifying a caller • 23
 Incoming Calls **(1.2)** • 57

K

Key tones
 adjusting the volume • 21
 muting • 44
 sending • 44
 Keys
 description • 9
 external • 81
 location • 8

L

Language **(4.10)** • 84
 Last number redialing • 20
 Length of calls • 58
 Letters
 entering • 39
 Light
 backlight • 12; 79
 service • 12; 80
 Lock code • 96
 Locking phone • 18
 Low battery indicator • 16

M

Maintenance • 125
 Melody Composer **(3.9)** • 75
 Memory status • 38
 Memos
 editing • 89
 erasing • 90
 writing • 89
 Menus
 by scrolling • 50
 by shortcut • 51
 list • 52
 using • 50
 Messages
 greeting **(4.1)** • 77
 preset **(2.4)** • 63
 reading **(2.2)** • 60
 setup **(2.5)** • 64
 voice mail **(2.1)** • 59
 writing **(2.3)** • 62

M (continued)

- Minute Minder **(3.7)** • 74
- Missed calls **(1.1)** • 57
 - deleting • 23
 - editing the number • 23
 - viewing • 23; 57
- Mute key tones • 44

N

- NAM, selecting **(7.5)** • 102
- Names
 - entering • 39
 - options • 36
 - searching/dialing • 31
 - storing in the
 - phonebook • 30
- Network Selection **(7.3)** • 101
- Network Services **(7)** • 99
- Number
 - correcting • 19
 - editing
 - missed call • 23
 - phonebook • 34
 - erasing phonebook • 34
 - moving phonebook • 35
 - own • 38
 - redialing • 20
 - automatically • 80
 - searching/dialing • 31
 - storing in the
 - phonebook • 30

O

- Options
 - selecting • 27
- Organizer **(5)** • 88
- Outgoing Calls **(1.3)** • 58
- Own Number • 38

P

- Phone
 - locking • 18
 - Settings **(4)** • 77
 - switching on/off • 17
- Phonebook • 30
 - dialing • 35
 - editing numbers • 34
 - erasing numbers • 34
 - making calls • 20
 - moving numbers • 35
 - options • 36
 - searching • 31
 - storing numbers/names • 30
- Playing, voice memo • 111
- Preset Message List **(2.4)** • 63
- Problem solving • 112

R

- Read Messages **(2.2)** • 60
- Recording,
 - voice memo • 111
- Redialing
 - automatically • 80
 - last number • 20
- Reset Setting **(4.12)** • 87
- Restriction, call • 97
- Ring
 - Tone **(3.1)** • 71
 - type • 72
 - Volume **(3.2)** • 71

S

- Safety
 - batteries • 117
 - information • 114
 - precautions • 5
- Security **(6)** • 96
- Searching for names/numbers • 31
- Security code • 96
- Selecting functions/options • 27
- Sending
 - key tones • 44
 - messages • 62
- Service code **(7.6)** • 103
- Service light • 12; 80
- Setting
 - alarm **(5.4)** • 94
 - date **(5.3.2)** • 93
 - display language • 84
 - time **(5.3.1)** • 92
- Settings
 - resetting **(4.12)** • 87
- Setup **(2.5)** • 64
- Shortcut Key **(4.7)** • 82
- Silent mode • 25
- Slide Menu • 78
- SMS
 - setup **(2.5)** • 64
 - Tone **(3.5)** • 73
 - using • 59
- Soft keys, using • 26
- Solving problems • 112
- SOS Call List **(6.4)** • 98
- Sound Settings **(3)** • 71
- Speed Dialing • 35
- Switching on/off
 - phone • 17

T

- Tasks
 - defining • 90
 - deleting • 92
 - editing • 91
 - sorting • 92

- Text messages • 62
 - preset **(2.4)** • 63
 - reading **(2.2)** • 60
 - setup **(2.5)** • 64
 - writing **(2.3)** • 62

Time

- calls **(1.4)** • 58
- format **(5.3.4)** • 93
- setting **(5.3.1)** • 92
- world **(5.3.3)** • 93

To do List (5.2) • 90**Tone**

- connect **(3.8)** • 74
- error **(3.6)** • 73
- length **(3.5)** • 73
- melody • 72
- SMS **(2.6)** • 65
- ring **(3.1)** • 71
- Travel charger • 15

V

- Vibration • 72
- Voice Command **(10.2)** • 110
- Voice mail **(2.1)** • 59
- Voice memo • 110
- Voice privacy **(7.4)** • 102
- Voice Server Number **(2.1.2)** • 60
- Volume
 - adjusting • 21
 - selecting the ring **(3.2)** • 71

W

- Waiting
 - call • 100
- World Time **(5.3.3)** • 93
- Write Messages **(2.3)** • 62
- Writing memos • 89

Access the Menu Function

- ① Press the **Menu** soft key.
- ② Scroll through the list of menus until you reach the required menu by pressing the ▲ or ▼ key.
- ③ Press the **Select** soft key.
- ④ Scroll through the list of options until the required one is selected by pressing the the ▲ or ▼ key.
- ⑤ Press the **Select** soft key.

• Each of the two soft keys (and) performs the function indicated by the text above it (bottom line on the display).



TDMA Mobile Telephone STH-N395 Quick Reference Card

Switch On/Off	Press and hold  .
Make a Call	① Enter the number. ② Press  .
End a Call	Briefly press  .
View Missed Calls right after they were missed	① Open the folder and press the View soft key. ② Scroll through the missed calls by pressing the the ▲ or ▼ key. ③ To return the call, press  .

Answer a Call	Open the folder <i>or</i> Press  .	Store Numbers in the Phonebook	- Enter the number. - Press the Save soft key. - Select the label, and press the Select soft key - Enter the name, and press the OK soft key. - If necessary, change the location. - Press the OK soft key.
Adjust the Volume	Press the volume keys on the left side of the phone.		
Choose the Alert Type	- Select the Alert Type menu option (3.3). - Select an option: Light Only, Melody, Vibration, and Vibra+Melody. - Press the Select soft key to confirm.	Search for a Number in the Phonebook	- Press the Names soft key. - Enter the first letters of the name. - Press the Search soft key. - To scroll through the names, press the ▲ or ▼ key. - To make a call, press the  key.