


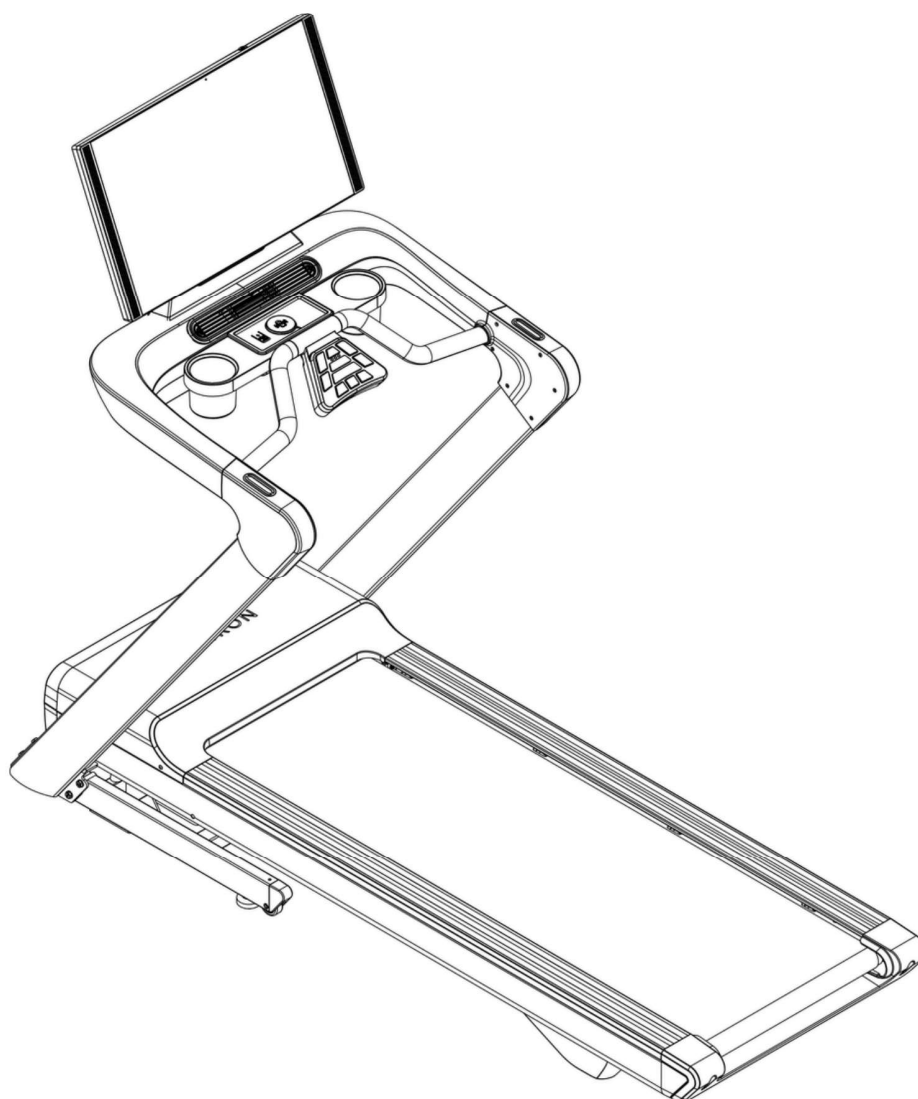

AVIRON JUSTICE

USER MANUAL

AVIRON ACTIVE

END BORING WORKOUTS

We're thrilled you've chosen the Aviron Justice Treadmill. For the best experience, please review the instruction manual before use.

Table of Contents

BEFORE STARTING	2
Safety Instructions	2
PRODUCT OVERVIEW AND SPECIFICATIONS	6
Treadmill Dimensions and Specifications	6
Treadmill Parts Details	7
Console Module Details (ATS)	8
PARTS AND TOOLS	9
ASSEMBLY INSTRUCTIONS	11
Upright Posts	11
Console Base	15
Console Covers	19
Bottle/Phone Holders	21
Console Bracket & Cover	22
Console	24
Console Fixing Bracket & Cover	25
Power Cord Bracket	28
CONNECTING TO A NETWORK	29
ACCESSING ADMIN AND SYSTEM SETTINGS	31
SETTING UP YOUR TREADMILL	32
Moving the Treadmill	32
Leveling the Treadmill	33
Adjusting the Console Angle	34
TREADMILL USAGE AND BEST PRACTICES	35
Powering On/Off	35
Stepping On	36
Safety Key	37
Console Controllers	38
CARE AND MAINTENANCE	39
Cleaning the Treadmill	39
Maintenance Schedule (Daily/Weekly/Monthly)	40
Tests and Inspections	41
Centering/Tensioning the Running Belt	42
TERMS AND CONDITIONS	44
WARRANTY AND CERTIFICATIONS	45
STATEMENTS AND NOTICES	46
EXPLODED DIAGRAM & PARTS LIST	51

BEFORE STARTING

Safety Instructions

Please read all instructions before assembling or using the equipment to ensure safety and protection. The owner is responsible for ensuring all users are informed of the warnings and precautions. Use the equipment only as instructed. Improper use may lead to serious injury or death. Aviron is not liable for any damage or injury resulting from misuse.

⚠ Product Assembly: At least two people are recommended for safely assembling. Do not plug in the treadmill until assembly is fully complete.

Consult Your Physician: Consult your physician before using the equipment. If you feel faint, dizzy, or experience pain, stop and seek medical attention immediately. It's recommended to consult with a fitness professional for proper use of equipment.

Usability and Supervision: Individuals under 13 years of age and those with reduced physical, sensory, or cognitive abilities, that may affect safe usage, should not use the equipment. Users over 13 years old or with limited experience or knowledge must receive proper supervision or instruction before use. Children of any age must not perform maintenance or play with the treadmill.

Stepping On and Off: Exercise caution when stepping on and off the deck. Always keep the deck surface clean and dry. Always ensure the treadmill belt is completely stopped before stepping on or off the equipment. Use the handrails for stability as needed and avoid sudden movements. Step on the footrails before stepping onto the belt and start the treadmill at a slow speed. When stepping off, stop the belt completely and carefully step off onto a stable surface. Never jump off the treadmill while it is in motion.

BEFORE STARTING

Safety Instructions

Avoid Hazards: Avoid wearing loose or dangling clothing while using the treadmill. Keep towels and other loose items away from the belt or any other moving part. Ensure your shoelaces are securely tied and do not extend beyond the soles of your shoes. Do not insert objects or body parts into any of the openings on the equipment or beneath the belt. Do not attempt to service the treadmill beyond the basic maintenance outlined in this manual. All other servicing should be handled by authorized personnel. Never use the treadmill if it is malfunctioning or if the power cord is damaged. Do not attach accessories not recommended or certified by the manufacturer. Do not carry the treadmill by its power cord. Do not use the treadmill in areas where aerosol (spray) products are in use or where oxygen is being administered.


Weight Capacity: The maximum recommended weight capacity for the equipment is 300lb (136 kg).

Safety Key: Always use the safety key when using the equipment.

BEFORE STARTING

Electrical safety

⚠️ Grounded Outlet: To reduce the risk of burns, fire, electric shock, or injury, only plug the equipment into a properly grounded outlet. If the supplied power cord does not fit, contact a qualified electrician to install the correct outlet type, as shown below. Use only a 110V non-GFCI outlet. Never use an adapter or extension cord.

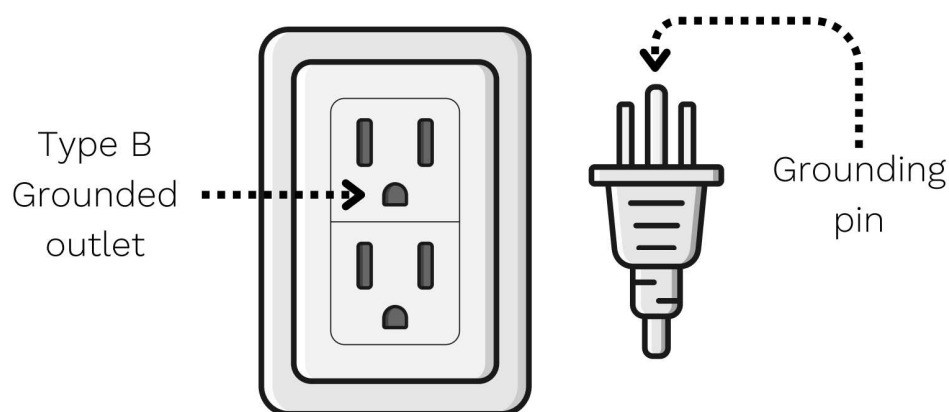


Disconnecting: Always turn off the power and unplug the treadmill before cleaning or when not in use. Avoid soaking or spraying liquids directly on the treadmill. Use a damp cloth for cleaning.

Power Cord: Use only the Airon-supplied power cord to ensure safe and reliable operation. Do not modify the plug. Unauthorized cords can damage the equipment, create safety hazards, and void the warranty. The power cord must never pass under the equipment and must stay away from heat, sharp edges, and water. Ensure the power cord is in good condition before use and contact our technical support for replacements or questions.

BEFORE STARTING

Location

The treadmill is designed for indoor use only. Do not operate or store it outdoors, in high humidity, or in damp or wet conditions. Place and use the treadmill on a stable, level surface in a secure area away from children, pets, and unauthorized users. Ensure there is at least 24 inches (61 cm) of clearance on all four sides. Keep the surrounding area free of furniture, equipment, and other objects.

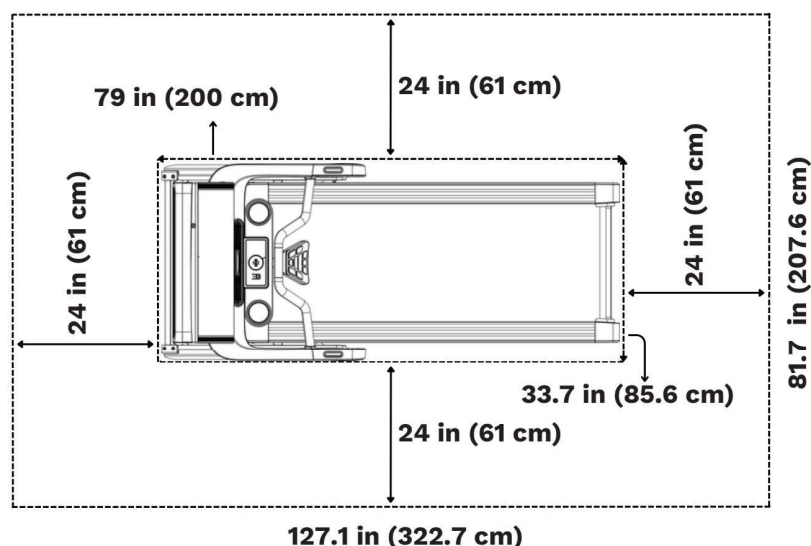

Warm-up

Warm-up Routine: Warm up for 5 to 10 minutes before exercising to gradually increase heart rate, blood flow, and loosen joints and muscles.

Appropriate Attire: Remove jewelry, including rings, chains, and pins, and always wear suitable clothing and footwear.

PRODUCT OVERVIEW AND SPECIFICATIONS

Treadmill Dimensions and Specifications

Product (L x W x H): 79 x 33.7 x 56.1 in / 200 x 85.6 x 143 cm

Running Area (L x W): 59.01 x 21.25 in / 150 x 51 cm

Running Deck Height: 7.4 in / 19 cm

Total Weight: 251.3 lb / 114 kg

Operating Temperature Range: 32°F to 104°F / 0°C to 40°C

Storage Temperature Range: 14°F to 140°F / -10°C to 60°C

Power Requirements: 110V, 15 A, non-GFCI power outlet**

Motor Details: Brushless DC 3.5 CHP

Speed Range: 0 to 12.4 MPH / 0 to 20 KPH

Speed Increments: 0.1 MPH or KPH (set by user via Admin Settings)

Incline Range: 0 to 15%

Incline Increments: 0.5%

Console Tilt Range: 48° in total

User Height Range: 4 ft 10 in to 6 ft 4 in / 147 to 193 cm

User Maximum Weight: 300 lb / 136 kg

**** Power Requirements:**


- The treadmill must be plugged directly into a standard power outlet. Avoid using extension cords or power strips.
- For optimal performance and safety, it should be the only device connected to the circuit breaker.
- Do not use GFCI outlets, as they may cause operational issues.

Recommended Space Requirement


Dimensions (L x W): 127.1 x 81.7 in / 322.7 x 207.6 cm

PRODUCT OVERVIEW AND SPECIFICATIONS

Treadmill Parts Details

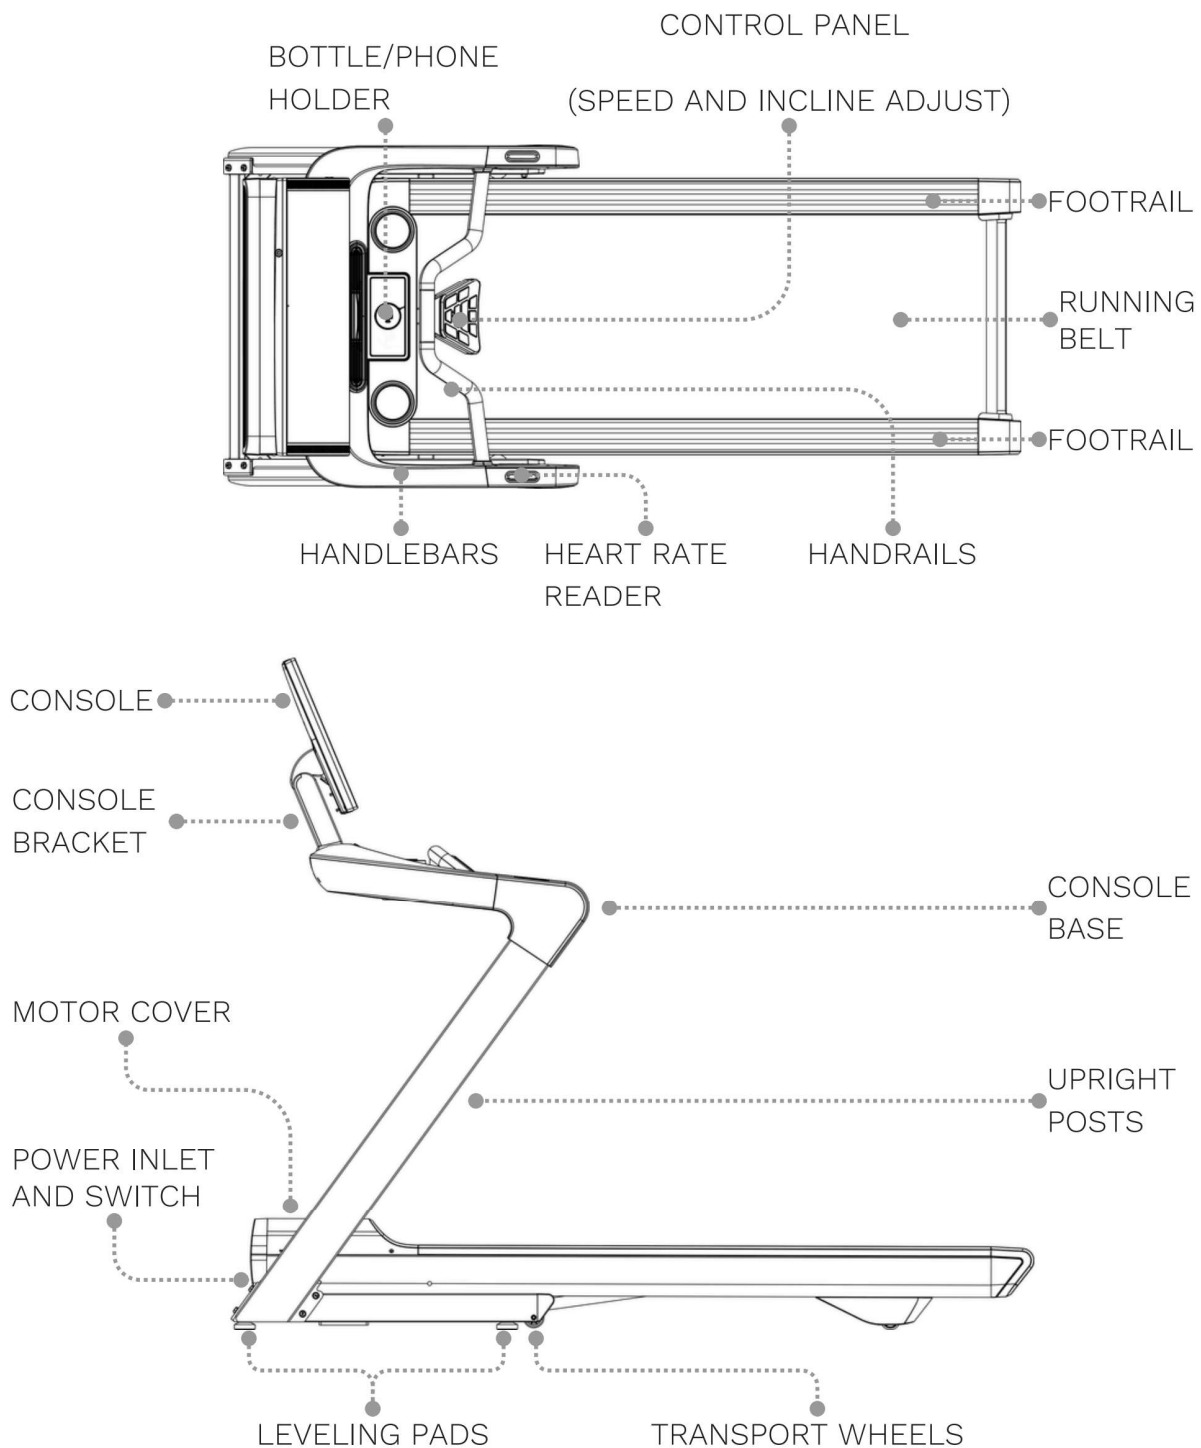

Console Module (ATS)

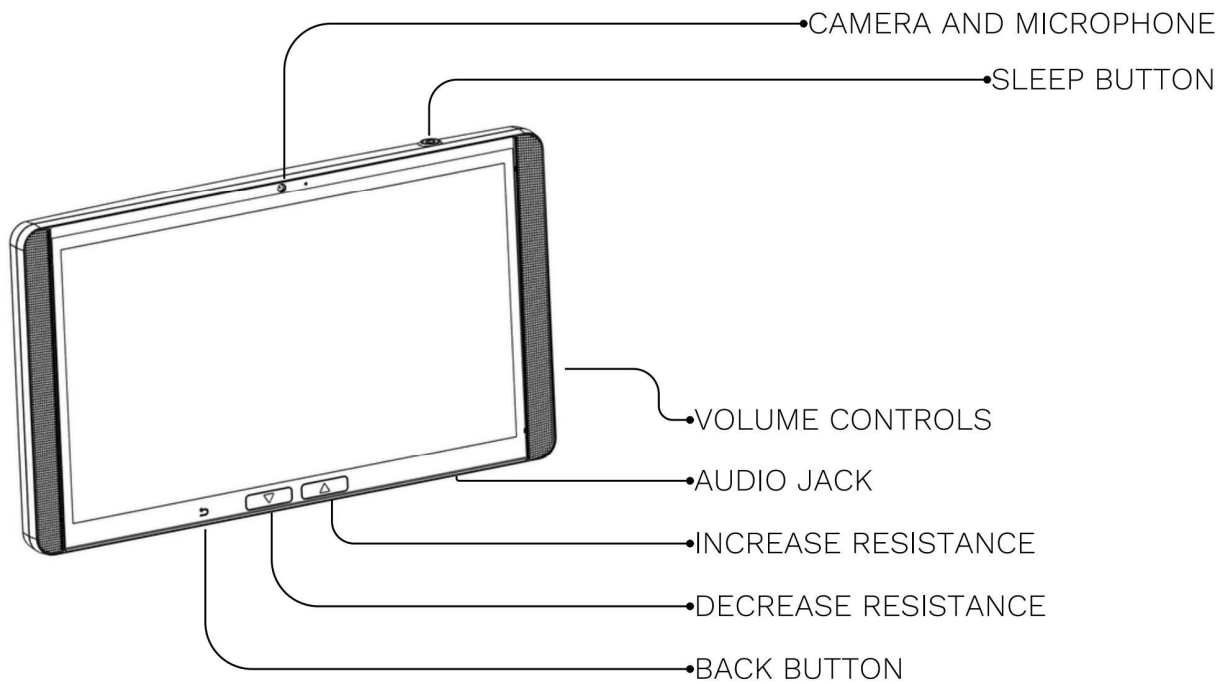

ETHERNET PORT LOCATED AT REAR

NOTE: The image shown is a simplified representation of the Aviron touchscreen. Actual design and appearance may vary depending on the model or production batch.

PARTS AND TOOLS

PARTS	A	MAIN FRAME	1
	B	LEFT UPRIGHT POST	1
	C	RIGHT UPRIGHT POST (W/ CABLE)	1
	D	CONSOLE BASE	1
	E	CONSOLE BRACKET	1
	F	CONSOLE BRACKET BACK COVER	1
	G	CONSOLE	1
	H	CONSOLE FIXING BRACKET	1
	I	CONSOLE BRACKET TOP COVER	1
	J	BOTTLE HOLDER	1
	K	REAR WHEEL COVERS	1
	L	POWER CABLE	1
	M	SILICON OIL LUBRICANT	1
	N	CONSOLE BASE CONNECTOR COVER	1
TOOLS	1	ALLEN KEY M5	1
	2	ALLEN KEY M6 L-SHAPE	1
	3	ALLEN KEY M6 T-SHAPE	1
	4	M13/M17 OPEN-END WRENCH	1
	5	PHILLIPS PH2 SCREWDRIVER	1
	6	HEX SOCKET WRENCH M17	1
FASTENERS	F1	HEX HEAD SCREW M10 X 15MM	8
	F2	FLAT WASHER Ø10.5*Ø20*T1.5MM	8
	F3	SOCKET HEAD CAP BOLT M8 X 20MM	8
	F4	HEX HEAD SCREW M8 X 20MM	5
	F5	PAN HEAD SCREW M5 X 10MM	9
	F6	SOCKET HEAD CAP BOLT M6 X 15MM	1
	F7	PAN HEAD SELF TAPPING SCREW M4 X 12MM	6

PARTS AND TOOLS

